


SINGER*

SEWING MACHINE

491D

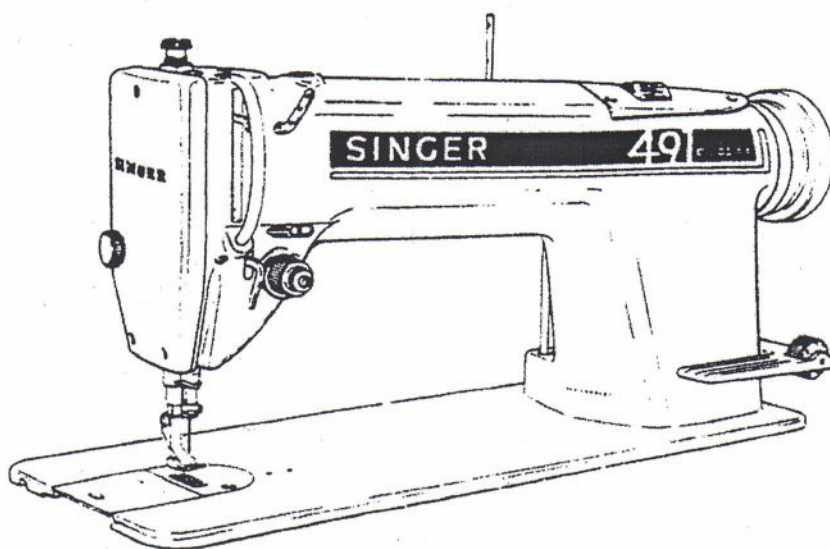

SERVICE MANUAL FOR SINGER 491D SEWING MACHINE

PARTS CHART FOR 491D200GA & 491D300GA


Form U251 (1273)

Service Manual

SINGER*

491_D **Machine**

THE SINGER COMPANY

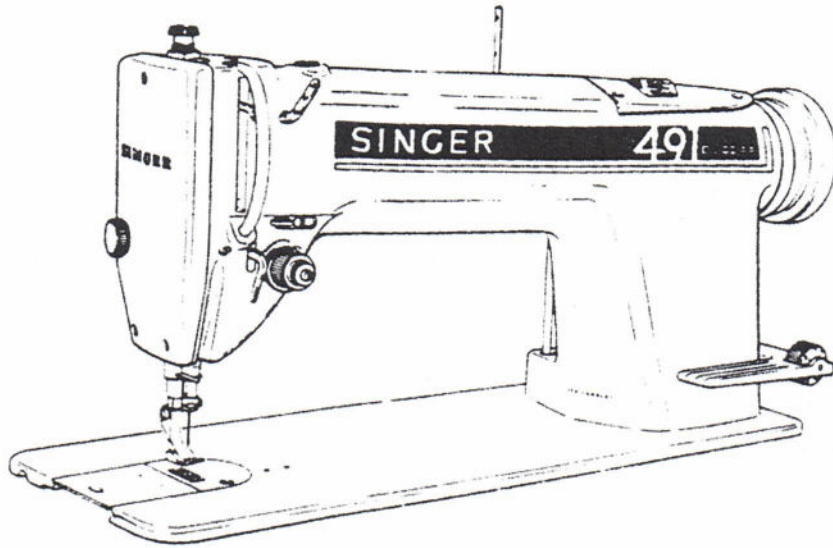

DESCRIPTION

Class 491D Machines are high speed, rotary hook, fully automatic lubricated long arm flat bed lockstitch machines with drop feed and hand operated reverse feeding mechanism. Recommended for general stitching operations on a range of light to heavyweight fabrics.

GENERAL FEATURES

Balanced horizontal axis rotating hook.

Pendant link feed with feed leveling hinge pins.

Dial type stitch regulator on feed reverse lever,

Thread take-up lever guard. Equipped with improved head end lubrication.

Knee lifter mechanism is integral with the machine base and oil reservoir.

Arm top cover with oil flow indicator.

The arm is provided with a seat for mounting a light fixture.

SPECIFICATIONS

Needle bar stroke	30.5 mm - 491D200AA
	36.5 mm - 491D300AA
Clearance under presser foot	7.2 mm - 491D200AA
	7.9 mm - 491D300AA
(Maximum lift of presser foot when raised with knee lifter - 12.7 mm)	
Maximum stitch length	6 S.P.I.
Maximum speed	5,500 S.P.M. - 491D200AA
	5,000 S.P.M. - 491D300AA
Oil	SINGER* Type "C" Oil
Bed size	475 mm x 178 mm

TO SET NEEDLE BAR AT CORRECT HEIGHT

PREPARATION:

Remove face plate, slide plate and throat plate. See that needle is correctly set in needle bar.

Lower end of bushing A, Fig. 2 must be set as shown in Fig. 2. To reset bushing, loosen screw B.

CHECK:

When needle bar is at its lowest point (during rotation of machine pulley), UPPER TIMING MARK on needle bar should be level with lower end of bushing.

Check timing of hook as instructed on page 5.

SETTING:

Loosen clamping screw C, Fig. 2. Raise or lower needle bar so that UPPER TIMING MARK is level with lower end of bushing. Then securely tighten screw C.

Replace throat plate and slide plate.

When replacing the face plate, make certain that the screw holes in the face plate gasket are aligned with the respective screw holes in the face plate; avoiding injury to the gasket and consequent oil leakage.

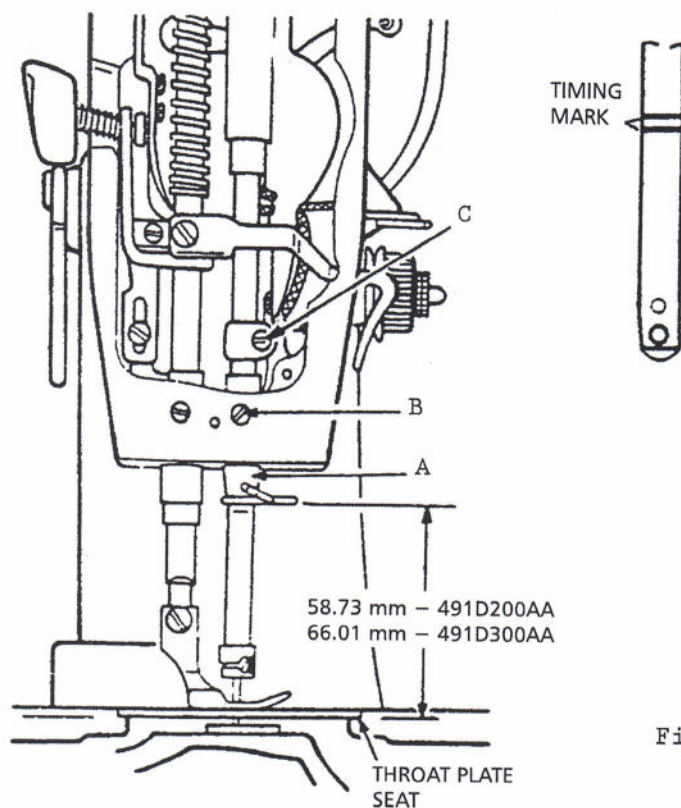


Fig. 2

TO SET CHECK SPRING HEIGHT

PREPARATION:

Thread the machine and place a lightweight material under presser foot.

CHECK:

Turn machine pulley over toward operator slowly. When take-up lever begins to rise, check spring D, Fig. 3 makes a slight dip and a return to its higher position. Later, as take-up lever approaches top of stroke, check spring D should be drawn all the way down; setting the stitch. As lever descends, check spring D returns to rest.

SETTING:

Loosen screw E, Fig. 3. Turn stud F, Fig. 3 (at the same time turning entire tension assembly) either over toward left to lower check spring and decrease its movement, or over toward right to raise check spring and increase its movement. Securely tighten set screw E.

NOTE: Under certain conditions of tacking, it may be necessary to set the check spring higher than it is otherwise normally set.

CAUTION: Check spring height setting must be checked each time a different foot is applied to machine.

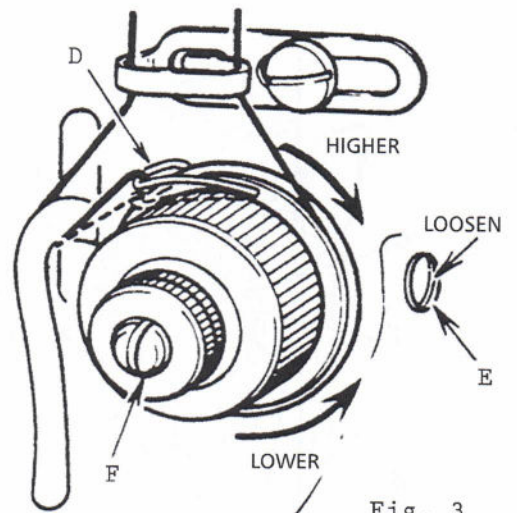


Fig. 3

TO SET CHECK SPRING TENSION

PREPARATION:

Thread the machine, securely tighten set screw E, Fig. 4. Make certain thumb nut is on stud F, fig. 4.

CHECK:

Tension on check spring D, Fig. 4, should be sufficient to ensure action at top speed; but still light enough to permit itself to be drawn all the way down (as take-up lever approaches height of stroke) before any thread is drawn through the tension discs.

SETTING:

Using a large screwdriver in slot of stud F, turn stud either over toward left to decrease tension or over to right to increase it, as shown.

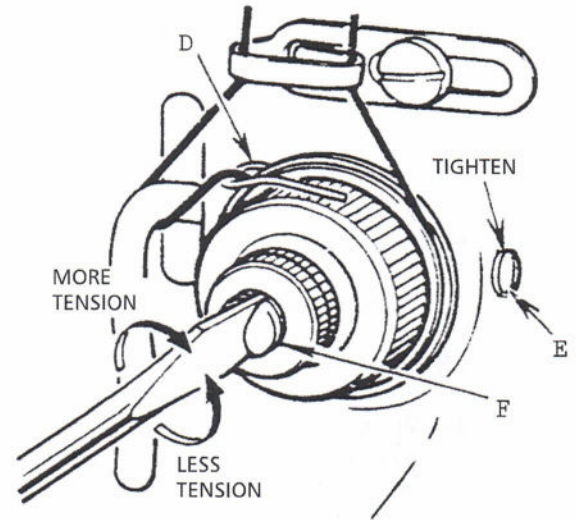


Fig. 4

NOTE: The tension on the check spring may require different settings depending upon the size of thread used. Heavier thread requires more tension to ensure correct thread control.

TO SET PRESSER BAR AT CORRECT HEIGHT

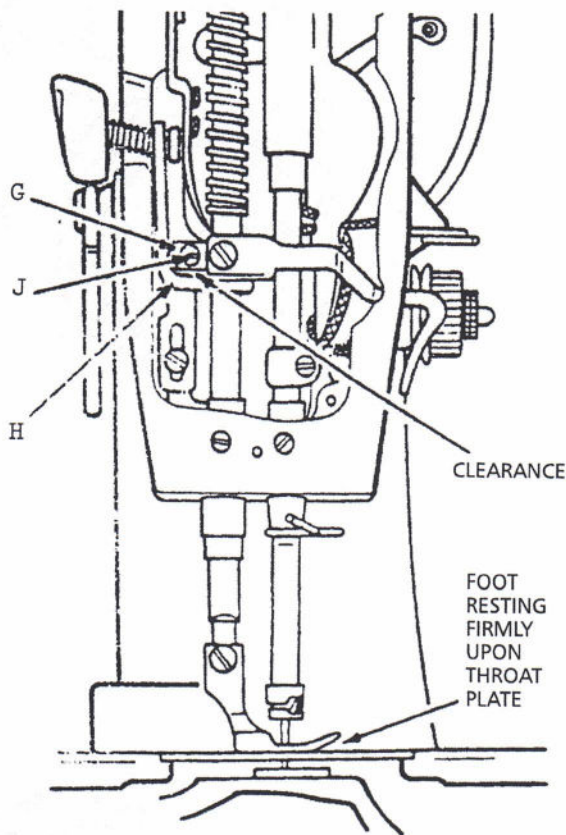


Fig. 5

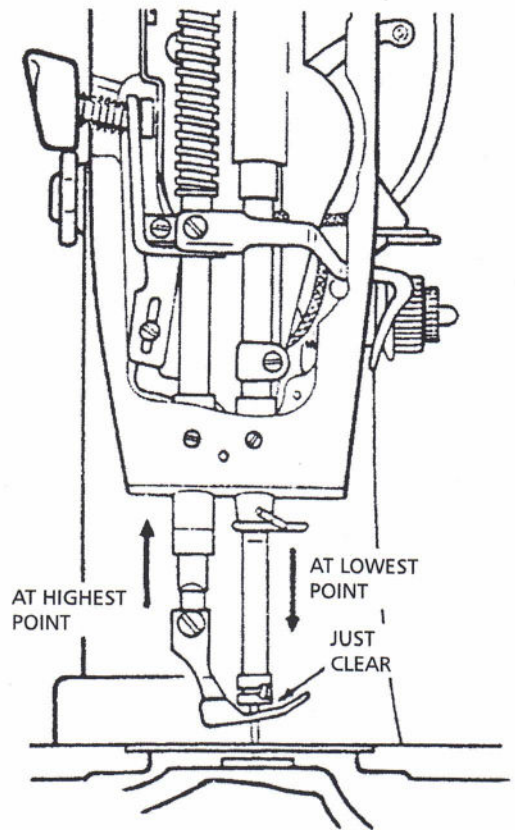


Fig. 6

PREPARATION:

Remove face plate and slide plate.

CHECK:

1. When presser foot rests firmly upon throat plate (with feed dog below throat plate) there should still be some clearance between guide bracket G, Fig. 5 and lifting lever link H, as shown in Fig. 5.
2. When presser foot is at its highest point and needle bar is at its lowest, top of presser foot should clear lower end of needle bar, as shown in Fig. 6.

SETTING:

Loosen clamping screw J, Fig. 5. Raise or lower guide bracket G, as required. Securely tighten screw J.

CAUTION: Whenever guide bracket has been moved on presser bar, inspect the check spring for correct setting, as instructed on pages 2 and 3.

TO TIME THE SEWING HOOK AND ALSO SET THE
SEWING HOOK SIDEWISE IN RELATION TO THE NEEDLE

PREPARATION:

Remove presser foot, slide plate, throat plate and feed dog.

CHECK:

When lower timing mark on needle bar is level with lower end of lower needle bar bushing A as shown in Fig. 7, the point of the sewing hook should be at the center of the needle, as shown in Fig. 7.

Also, when point of sewing hook passes needle, clearance between hook point K, Fig. 8 and needle should be approximately equal to thickness of a piece of ordinary notepaper (about .13 mm), as shown in Fig. 9.

NOTE: Not only point of sewing hook but entire "FLAT" of hook point should clear scarf on needle blade. Normally, a .5 mm clearance is provided between hub of hook and oil retaining collar.

SETTING:

Loosen two set screws L, Fig. 7 in hub of hook. Then retighten one of the set screws very lightly so that the sewing hook can still be turned on the shaft.

Hold shaft immovable and turn hook as required to bring point of hook to center of needle as shown in Fig. 7 and at the same time adjust clearance between needle and hook point as shown in Fig. 9.

Tighten set screws L lightly, turn machine pulley to make certain the sewing hook is correctly set in relation to the needle. Then securely tighten set screws L.

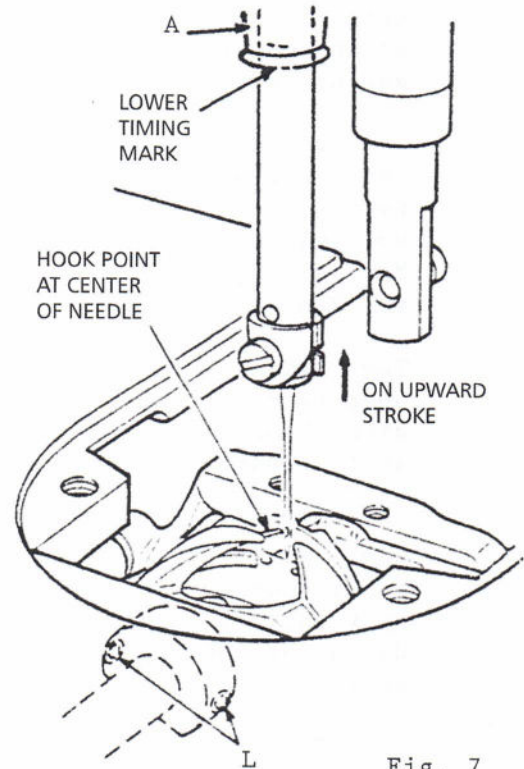


Fig. 7

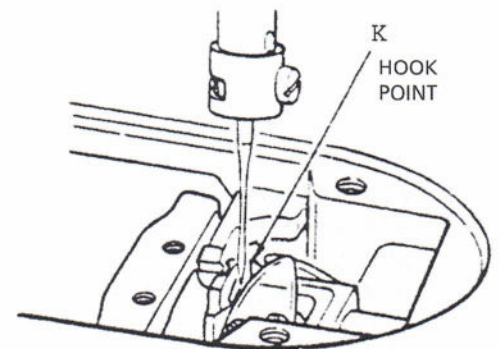


Fig. 8

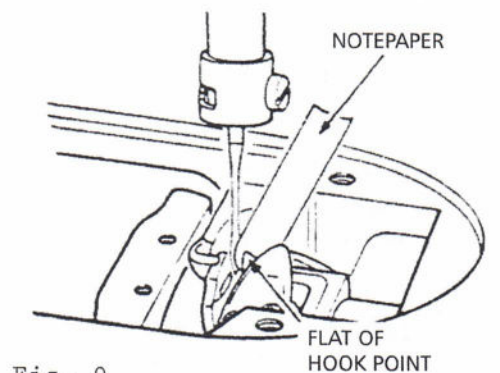


Fig. 9

FEED REVERSE LEVER

Before the machine leaves the factory, the spring tension of the feed reverse lever is set at an appropriate tension for easy and comfortable sewing operation.

If it is necessary to adjust the feed reverse lever spring tension, tip machine back and loosen feed reverse lever spring retainer screw Y3 holding the spring retainer 23 on the machine leg. Move spring retainer 23 up or down, as required, and firmly tighten screw Y3.

The lighter the tension, the easier it is to operate the feed reverse lever, however the tension should be set a little heavier for maximum stitch length and high speed sewing.

Normally, the machine is adjusted to sew a maximum stitch length of 4.2 mm. This however, can be changed to 5.1 mm (5 S.P.I.) is desired, by turning over the feed regulating dial stopper C4 on the underside of the feed reverse lever, as shown in Fig. 10.

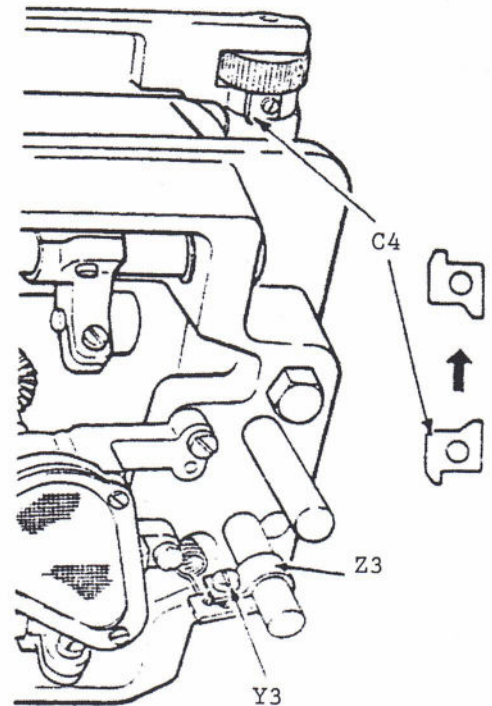


Fig. 10

CAUTION: MAKE SURE the feed dog clears the front and rear edges of the throat plate slots when maximum stitch length is changed to 5.1 mm.

TO TIME THE FEED

Before the machine leaves the factory, the feed and feed lifting eccentric is set for average sewing conditions; having the timing screw (screw M which appears immediately after set screw N, Fig. 11, when feed eccentric is rotated toward the operator) align on the timing mark provided for it on the arm shaft.

The timing screw M, Fig. 11, on the feed and feed lifting eccentric should be securely tightened after it has been aligned on the timing mark on the arm shaft. The set screw M should also be securely tightened.

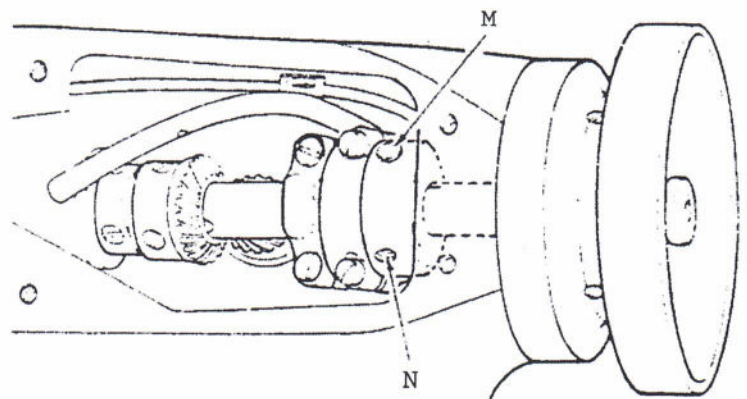


Fig. 11

If for any reason, it is necessary to alter the timing of feed and feed lifting eccentric, the eccentric should be adjusted and locked in desired setting with the timing screw M and the set screw N.

NOTE: Whenever the timing of the feed is changed, sewing hook should be checked for necessary adjustment also, as instructed on page 5.

TO SET FEED DOG AT CORRECT HEIGHT

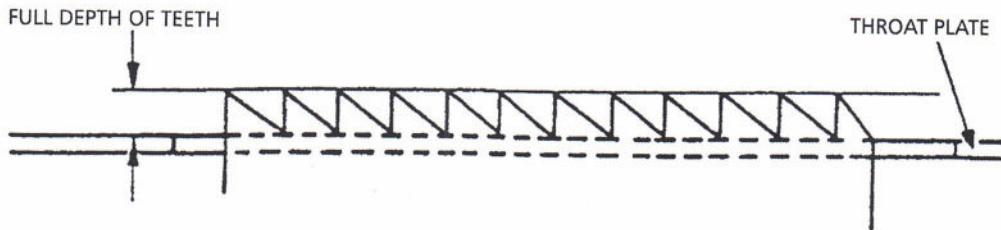


Fig. 12

When the feed dog is at its highest position, approximately the full depth of all the teeth should project above the top surface of the throat plate, as shown in Fig. 12.

Before checking the height of the feed dog, set the machine for the longest stitch.

To adjust, loosen the clamping screw P, Fig. 13 and raise or lower the feed dog (which is fastened to the feed bar Q, Fig. 13) as required. Then securely tighten screw P.

The feed dog should be level at the top of its feed path. If not, tip machine back and loosen feed bar hinge pin clamping screw A4 just enough to turn feed bar hinge pin (eccentric) B4, Fig. 13. Insert screwdriver into access hole in end of bed and turn hinge pin B4 as required to level the feed dog. Securely tighten clamping screw A4. Check feed dog height.

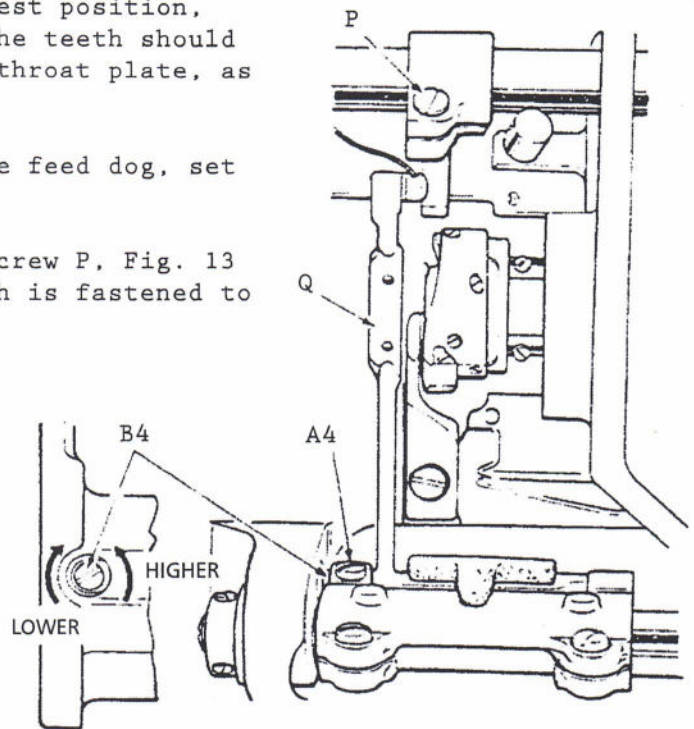


Fig. 13

It is found necessary to adjust the feed dog height due to the material being sewn and/or exchanging the feed dog and throat plate, it should be adjusted in the manner explained above.

NOTE: Feed dog should not contact edges of the throat plate slots during its movement but should be located centrally in relation to the front, rear and sides of throat plate slots.

INSTRUCTIONS
FOR
REMOVAL AND REPLACEMENT
OF
PRINCIPAL ASSEMBLIES

CAUTION TO MECHANICS

Machines of Class 491D are made with extreme precision in machining and assembly, and the "Superfinish" process provides microscopically smooth bearing surfaces. Therefore, special care should be taken not to permit any misalignment of parts or to cause any scratches or nicks on the bearing surfaces by careless assembly or handling of parts. Any such damage might render the machine incapable of the long, trouble-free service for which it is designed.

TO REMOVE THE SEWING HOOK

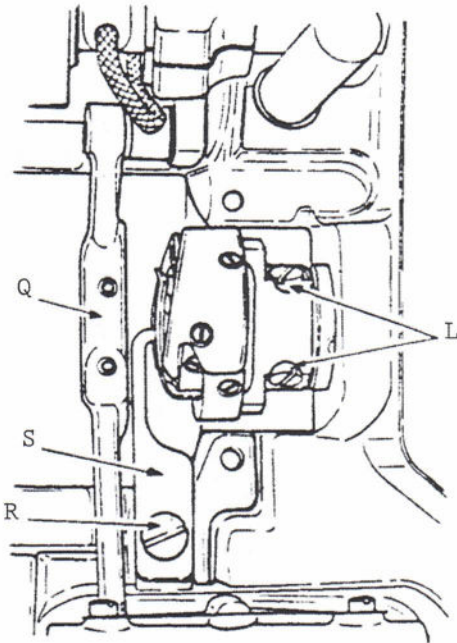


Fig. 14

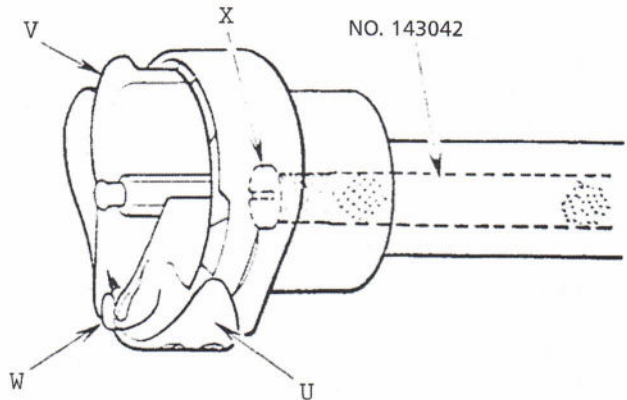


Fig. 15

Remove the needle, slide plate, throat plate and bobbin case. Remove the screw R, Fig. 14 and the bobbin case holder position bracket S, Fig. 14. Loosen the two set screws L, Fig. 14 in the hub of the hook and turn the machine pulley over toward the operator until the feed bar Q is raised to its highest point.

Turn the sewing hook until the thread guard U, is at the bottom, as shown in Fig. 15. Turn the bobbin case holder V, Fig. 15 until the notch W is also near the bottom, as shown in Figs. 15 and 16. The sewing hook can then be removed from the hook shaft.

TO REPLACE OIL FILTER 143042

While the sewing hook is off the shaft, it is advisable to replace the oil filter 143042, Fig. 15 in the end of the hook shaft. Unscrew the filter from the center of the shaft at X, Fig. 15 and replace with a complete new filter 143042.

TO REPLACE THE SEWING HOOK

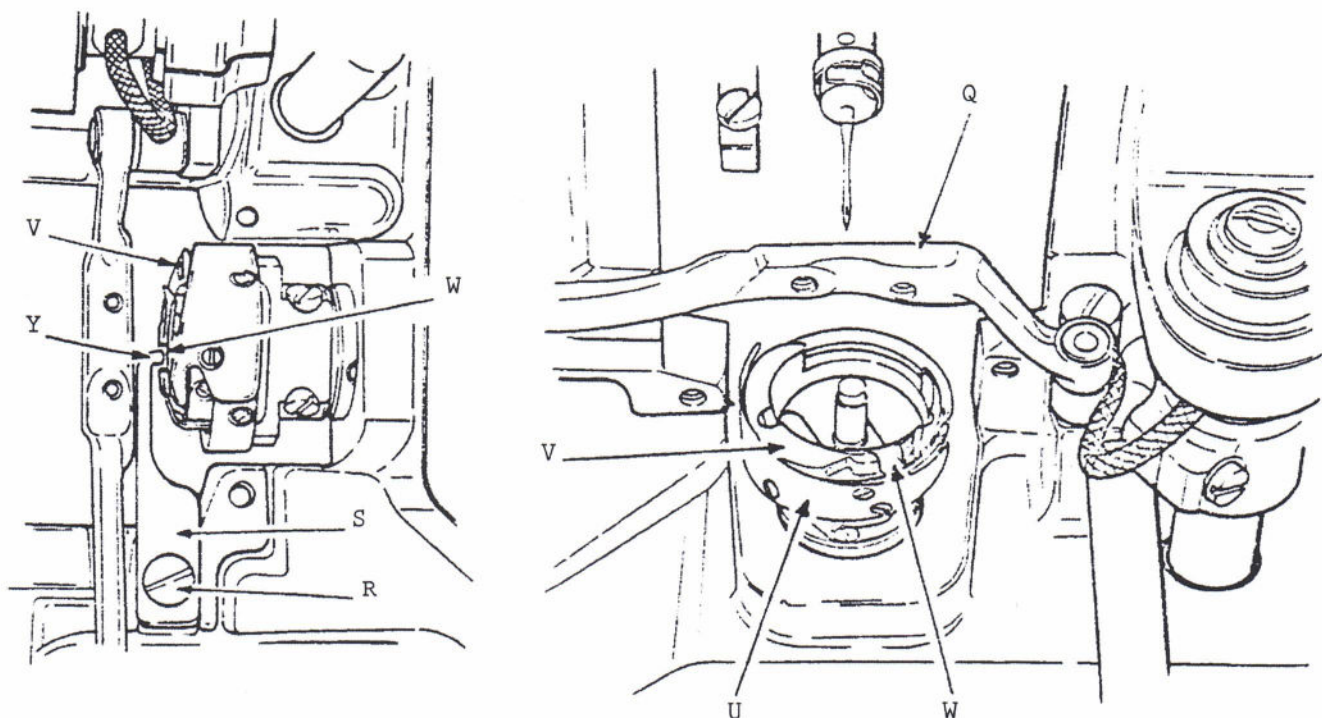


Fig. 16

When placing a new sewing hook on the shaft, have the sewing hook thread guard U at the bottom and the bobbin case holder V turned to the position shown in Fig. 16, so that the hook will clear the feed bar Q.

Place the hook in position on the shaft and turn the bobbin case holder V until the notch W is at the top, as shown in sketch at left above. Replace the bobbin case holder position bracket S, making certain that the finger Y (see above) enters the notch W at the top of the bobbin case holder. Then securely fasten the position finger by means of the screw R.

Replace the needle. Time the sewing hook, as instructed on page 5. Replace the bobbin case, throat plate and slide plate.

TO REMOVE AND REPLACE THE HOOK SHAFT

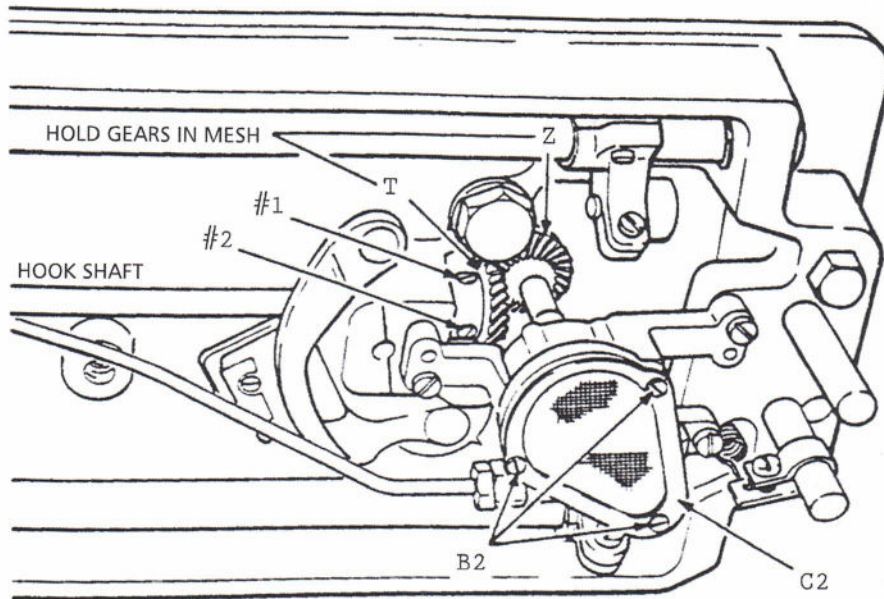


Fig. 17

Remove and replace the hook shaft in the following manner:-

1. Remove the sewing hook, as instructed on page 8.
2. Mark the two lower bevel gears Z and T, Fig. 17, with chalk or crayon, on one tooth of one gear and the corresponding space for that tooth in the other gear. This is important, as these gears may become separated during removal of shaft. These marks will then make it possible to obtain the original mating position of the gears.
3. Loosen the two set screws #1 and #2 in hook shaft bevel gear. While holding the two gears Z and T in mesh, as instructed in Fig. 17, withdraw the old hook shaft and INSERT THE NEW SHAFT.
4. Replace the sewing hook, as instructed on page 9.
5. Make certain that set screw #1 seats over flat on the hook shaft. Remove all end shake from hook shaft, pushing gear T, Fig. 17 toward the hook on the shaft. Securely tighten first set screw #1, then securely tighten the second screw #2.
6. Time the sewing hook as instructed on page 5.

NOTE: Set screw #1 is the first of the two set screws to appear on the hub of the bevel gear T as the machine pulley is turned over toward operator.

THE OIL PUMP

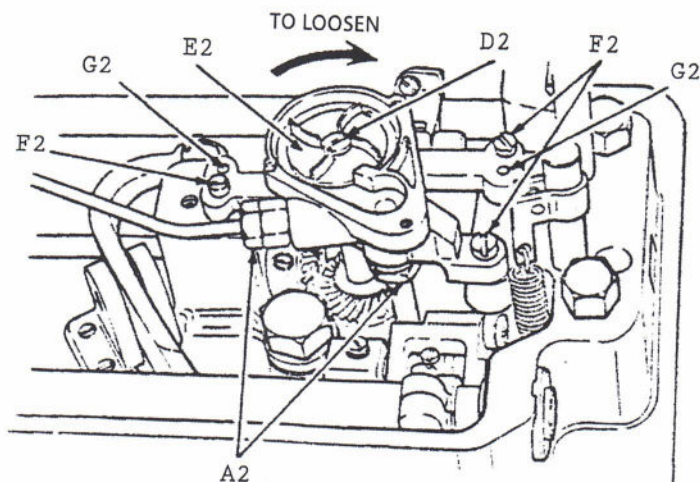


Fig. 18

TO REMOVE

1. Loosen the two oil pipe clamping sleeve nuts A2, Fig. 18.
2. Remove the three screws B2, Fig. 17.
3. Remove the screen frame, screen and oil pump cover C2, Fig. 17.
4. Remove the locking screw D2, Fig. 18.
5. Remove the impeller E2, by turning it over toward the RIGHT (clockwise) to loosen it, as instructed in Fig. 18.

CAUTION: The impeller E2 is designed to be screwed to the shaft by means of a LEFT-HAND THREAD and must be turned over toward the right to be loosened. Avoid damage to this impeller, as the efficient automatic lubrication of the machine is dependent upon it.

6. Remove the three screws F2.
7. Carefully pull the oil pump body off the lower end of the upright arm shaft.

TO REPLACE

1. Place oil pump body on underside of machine bed, so that position pins G2, slip into proper holes in machine casting, as shown above.
2. Replace and securely tighten the three screws F2. Make certain that machine turns freely as screws are tightened.
3. Carefully replace impeller E2, turning it over toward the LEFT to screw it on arm shaft (see CAUTION above).
4. Make certain that impeller E2 is not so tight that it will bind arm shaft. Make certain also that impeller clears both top and bottom of interior of oil pump body, then lock it in position by means of locking screw D2.
5. Replace pump cover, screen and frame C2 and three screws B2, Fig. 17. Securely tighten screws B2.
6. Replace two oil pipes in oil pump body, as shown above, and securely tighten sleeve nuts A2.

TO REMOVE AND REPLACE THE UPRIGHT ARM SHAFT (See Fig. 19)

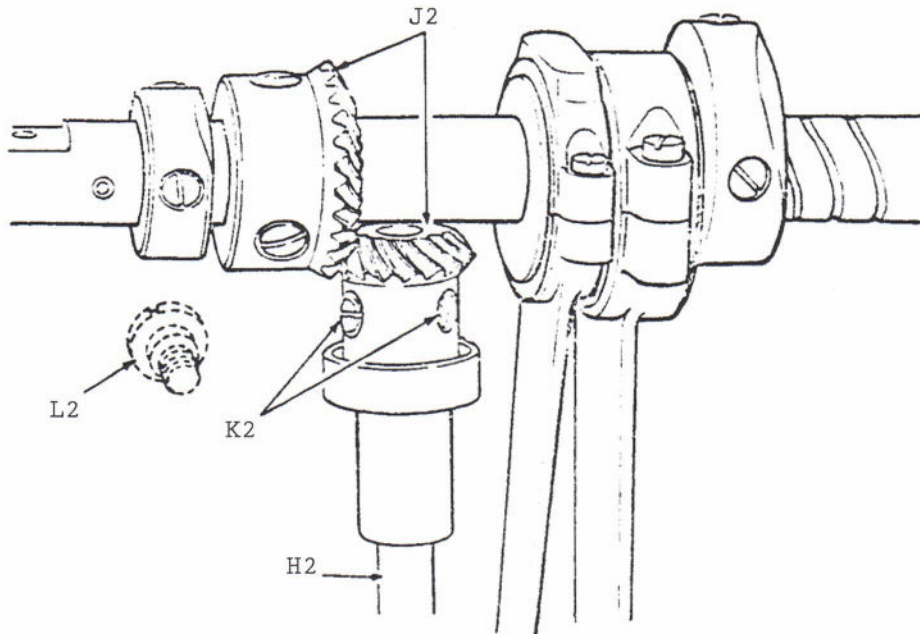


Fig. 19

REMOVAL:

If it is found necessary to remove the upright arm shaft H2, it should be removed in the following manner:-

1. Remove oil pump, as instructed on page 11.
2. Follow the instructions in Steps 2 and 3 for removal of hook shaft on page 10 except that, instead of removing hook shaft, merely remove hook shaft bevel gear T, Fig. 17.
3. Remove arm top cover.
4. Mark the two bevel gears J2, with chalk or crayon on one tooth of one gear and the corresponding space between the teeth of the other gear so that these gears may be re-assembled in their original relative positions without difficulty, if necessary.
5. Loosen set screws K2 in bevel gear at upper end of upright arm shaft. To loosen set screw K2, remove screw L2 in the rear of the arm and insert screwdriver through the hole.
6. Make certain bevel gear at lower end of upright arm shaft is fastened securely. Then while holding upper bevel gears J2 in mesh, draw upright arm shaft down and out of machine.

REPLACEMENT:

1. Before installing upright arm shaft, make certain it has the bevel gear Z, Fig. 17 correctly fastened at the lower end of shaft.
2. Insert upright arm shaft up through upper bevel gear, as shown in Fig. 19.

3. Turn shaft so that one of the two set screws K2 will bear upon the upper gear flat on the shaft and tighten the set screws K2.
4. Replace and set hook shaft bevel gear as instructed in Step 5 on page 10.
5. Replace oil pump, as instructed on page 11.
6. Replace top cover.

TO REMOVE AND REPLACE THE NEEDLE BAR (See Fig. 20)

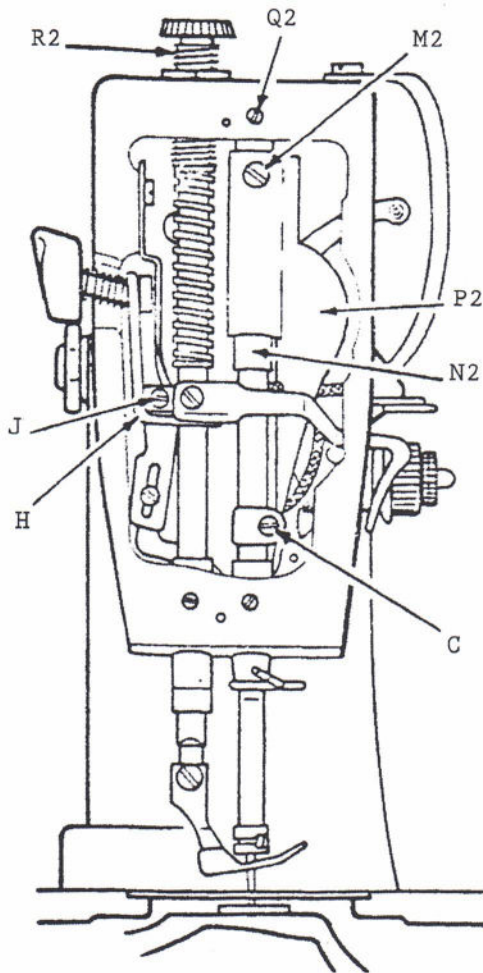


Fig. 20

Remove the needle bar in the following manner:-

1. Remove needle, needle set screw and needle bar thread guard.
2. Remove face plate.
3. Loosen clamping screw C.
4. Loosen screw M2 sufficiently to allow needle bar to pass, then slip needle bar up through both needle bar bushings and out of machine.

NOTE: If it becomes necessary to remove upper needle bar bushing N2, first remove screw M2 and take-up lever oil guard P2. Then loosen set screw Q2 and drive bushing N2 down and out of head of machine. Use a 10 mm driving pin.

Before replacing needle bar, replace upper needle bar bushing N2, by driving it down into hole provided for it in head of the machine. Make certain top of bushing N2 is level with top of arm. Tighten set screw Q2.

Replace the needle bar in the following manner:-

1. Slip needle bar down through both bushings in head of the machine. Tighten screw C.
2. Replace needle bar thread guard, needle set screw and needle.
3. Set needle bar at correct height and replace face plate as instructed in page 2.
4. Replace oil guard P2 and fasten it securely to bushing with set screw M2.

TO REMOVE AND REPLACE THE PRESSER BAR

To remove the presser bar:-

1. Remove presser foot and face plate.
2. Remove presser bar pressure regulating thumb screw R2, with presser bar guide from head of the machine.
3. Loosen clamping screw J about one turn (just enough to make it loose).
4. Slide presser bar up through lifting lever link H, Fig. 20 and bushing and out of machine.

To replace the presser bar:-

1. Slip presser bar down through lifting lever link H, Fig. 20 and lower presser bar bushing. Make sure that the O-ring is placed between lifting lever link H and guide bracket G.
2. Replace presser foot.
3. Replace presser bar pressure regulating thumb screw R2 with presser bar guide.
4. Set the presser bar at the correct height, as instructed on page 4.
5. Tighten screw J.

NEEDLE THREAD TAKE-UP

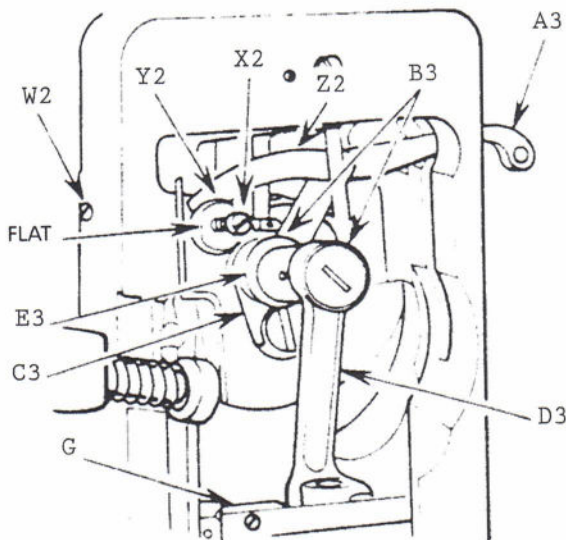


Fig. 21

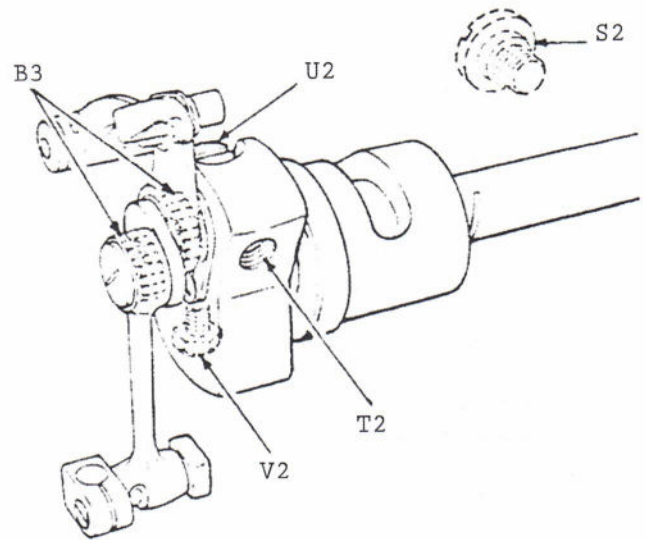


Fig. 22

To remove the needle thread take-up:-

1. Remove face plate and arm hole plug S2, Fig. 22 from machine.
2. Remove needle bar, upper needle bar bushing, presser bar pressure regulating thumb screw R2, Fig. 20 page 13, and guide bracket G, Fig. 21.

3. Turn machine pulley as required to reach screw T2, Fig. 22, in needle bar crank through hole left by removal of plug S2, Loosen set screw T2.
4. Using wrench 545945 (through same hole) and turning machine pulley as required, loosen the large hexagon head clamping screw U2, Fig. 22 on needle bar crank.

CAUTION: DO NOT DISTURB the smaller hexagon head position screw V2, Fig. 22 which holds the needle bar crank at its correct position on the horizontal arm shaft.

5. Loosen small set screw W2, Fig. 21 in the rear of the arm of the machine.
6. Insert a face plate screw X2, Fig. 21 in the tapped hole in center of stud Y2, Fig. 21 and, while holding back the needle thread take-up link inside the head at 22, Fig. 21, pull upon the screw X2 until the stud Y2 is removed. Remove face plate screw from stud.
7. Back the end of the take-up A3, Fig. 21 toward the inside of the machine, turning the machine pulley as required until the take-up is free of the slot provided for it.
8. The needle thread take-up link assembly (including parts B3, Z2, A3, C3, D3 and E3) can now be pulled free of the needle bar crank.

To replace the needle thread take-up:-

1. Make sure that the wearing plate C3 is in place and undamaged on the face of the needle bar crank, as shown in Fig. 21.
2. Place the needle thread take-up link 22 and take-up A3 in the head of the machine so that the stud E3, Fig. 21 in the center of the linkage slips into the hole provided for it in the needle bar crank, as shown in Fig. 21.
3. Slip the upper end of the take-up A3 through the slot provided for it in the head of the machine.
4. Insert stud Y2 through needle thread take-up lever link z2 and into its hole in the machine casting so that the oil wick fitted to the stud Y2 faces upward. DO NOT INSERT THE STUD TO ITS FULL DEPTH AT THIS TIME. There should be about .25 to .38 mm side play of the take-up lever link Z2 on the stud, until final adjustment is made in Step 15.
5. Turn the set screw W2 inward lightly against the flat on the stud Y2. DO NOT TIGHTEN screw W2 until final adjustment is made in Step 15.
6. Turn machine pulley as required to make set screw T2 in needle bar crank accessible through hole at S2, Fig. 22 in rear of machine head.
7. Insert a screwdriver through this hole and, while turning stud E3 by hand to find its flat, turn set screw T2 until it bears tightly upon the flat.
8. Turn screw T2 back, just enough to "break it loose".
9. Test for side play by pushing take-up lever A3 gently right and left; there should be .025 to .05 mm side shake between lever and wearing plate.
10. Move thread take-up crank inward or outward in needle bar crank, as required, to obtain clearance.

11. Using wrench 545945, through same hole and turning machine pulley as required, tighten hexagon head screw U2 lightly.
12. Loosen set screw T2.
13. Securely tighten clamping screw U2,
14. Securely tighten set screw T2.
15. Push hinge stud Y2 fully into machine casting and securely tighten set screw W2.
16. Turn machine pulley slowly, by hand, at least one complete revolution; testing take-up for binding, end shake and noise. If binding occurs, re-check clearance between take-up and wearing plate C3 and between hinge stud Y2 and machine casting.
17. Replace guide bracket G in head of machine, as shown in Fig. 21.
18. Replace presser bar pressure regulating thumb screw R2, Fig. 20, page 13.
19. Replace and adjust upper needle bar bushing and needle bar with their accessories, as instructed on pages 2 and 13.
20. Replace and securely tighten arm hole plug S2.
21. Replace the face plate as instructed on page 2.

TO REMOVE AND REPLACE ARM SIDE SHIELD WICK, NEEDLE BAR WICK
AND NEEDLE BAR CONNECTING STUD WICK (See Fig. 23)

Arm side shield wick may be removed, after removing the face plate and the screw F3. Lift arm side shield G3 up and out of machine.

When replacing arm side shield wick, make sure that lower end of wick drops into oil pool beneath needle bar crank and that the two upper wick loops are located as close as possible to the needle bearings at B3, Fig. 24 without touching them. Also make sure that the edge of arm side shield G3 is pressed firmly against the side wall of the arm to ensure proper position. Then replace and securely tighten screw F3.

To remove needle bar wick and connecting stud wick, move take-up lever A3, so that it does not interfere with removal of oil guard P2. Then remove face plate and screw M2; lift take-up oil guard P2, with the top wicks, up and out of machine.

When replacing the oil guard P2, which carries the needle bar wick and connecting stud wick, make sure that lower end of the stud wick drops into oil pool behind lower needle bar bushing and that the loop of needle bar wick is placed behind the needle bar, as shown in Fig. 23.

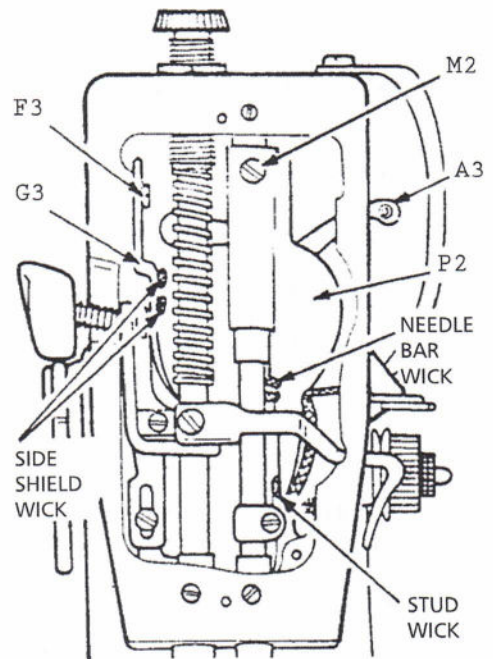


Fig. 23

TO REMOVE OIL WICK HOLDER (See Fig. 24)

Oil wick holder includes two oil wick leaders (see Fig. 25) and an oil wick for the needle bar link and for the two sets of needle bearings in the thread take-up as shown in Fig. 24. It is removed in the following manner:-

1. Remove face plate, needle bar and upper needle bar bushing from the machine, as instructed on page 13.
2. Remove upper section of presser bar, as instructed on page 14.
3. Remove holder screw H3.
4. Pulling gently, draw entire oil wick holder assembly out of the head of the machine.

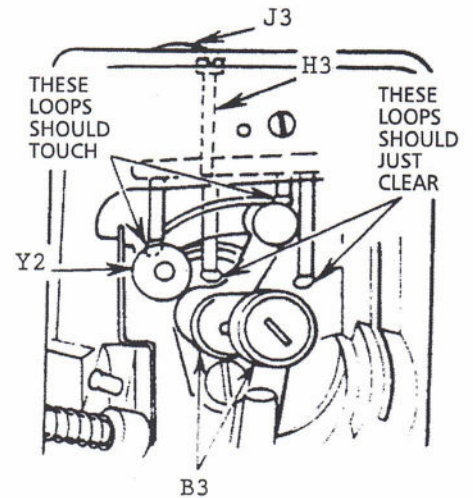


Fig. 24

TO INSTALL NEW OIL WICK HOLDER

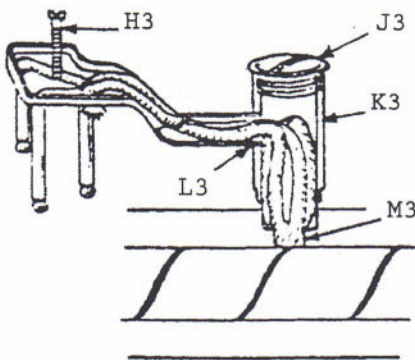


Fig. 25 Correct Installation

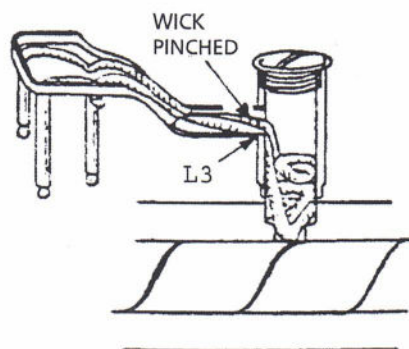


Fig. 26 Incorrect Installation

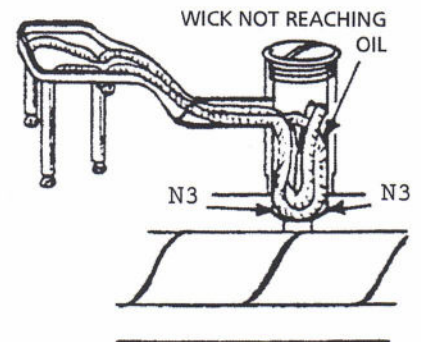


Fig. 27 Incorrect Installation

1. Remove old oil wick holder as instructed above.
2. Remove top arm plug screw J3, Fig. 25.
3. Insert two oil wick leaders into oil tube K3, as shown in Fig. 25 so that wick is slack over edge of oil tube K3 at point L3, Fig. 25. This will insure free passage of oil. Use tweezers through the screw hole at J3 to loop the wick and bring it into positive contact with the arm shaft approximately at point M3 shown in Fig. 25.

NOTE: DO NOT FORCE the wick leaders down too tightly against the edge L3 of oil tube, as shown in Fig. 26, as this will decrease the flow of oil from the arm shaft to the needle bar link and take-up bearings.

CAUTION: If the bottom of either oil wick leader is caught on the ledge as shown at N3, Fig. 27, no oil can be taken up by the wick to be carried to the needle bar link and thread take-up bearing, where it is needed. Make sure that the oil wick leaders are pushed all the way down into the smaller hole, without jamming, until they touch the arm shaft, as shown in Fig. 25.

4. When oil wick leaders are correctly installed, replace holder screw H3, Fig. 25.
5. Adjust the three oil wick loops in holder (see Figs. 24 and 25), so that two of the loops come as close as possible to, without touching, the two sets of needle bearings B3 while the third wick loop makes positive contact with the wick inside the stud Y2, in the needle bar link, as shown in Fig. 24.
6. Securely tighten holder screw H3.
7. Replace arm plug screw J3.
8. Replace upper section of presser bar, upper needle bar bushing and needle bar, as instructed on pages 13 and 14.
9. Replace face plate, as instructed on page 2.

THE ARM SHAFT

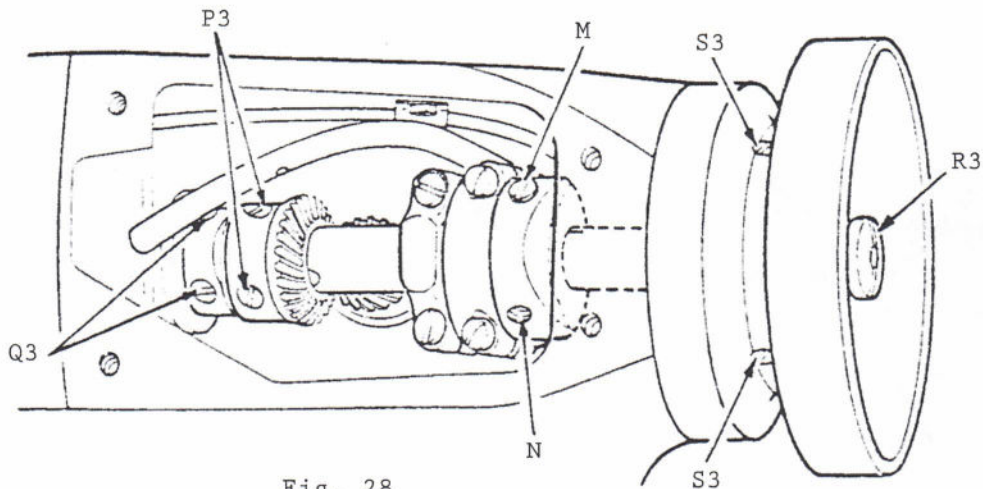


Fig. 28

REMOVAL (See Figs. 28 to 30)

1. Remove the face plate.
2. Remove the arm side shield and wick and the thread take-up oil guard, as instructed on pages 16 and 17.
3. Remove the needle bar, upper needle bar bushing, presser foot and presser bar, as instructed on pages 13 and 14.
4. Remove entire thread take-up lever assembly, as instructed on pages 14 and 15.
5. Loosen the four screws in the arm top cover and remove the arm top cover.
6. Remove the feed timing screw M, Fig. 28 and loosen the set screw N, Fig. 28 in the feed and feed lifting eccentric.
7. Loosen the two set screws P3 in the bevel gear and the two set screws Q3 in the thrust collar.
8. Remove arm shaft screw R3, Fig. 28 from machine pulley end of arm shaft.

9. Loosen the two set screws S3, Fig. 28 and remove the machine pulley.
10. Turn the needle bar crank until it is in the position shown at T3, Fig. 30, to prevent crank from disturbing the three wick loops in holder U3, Fig. 30 during removal of arm shaft.

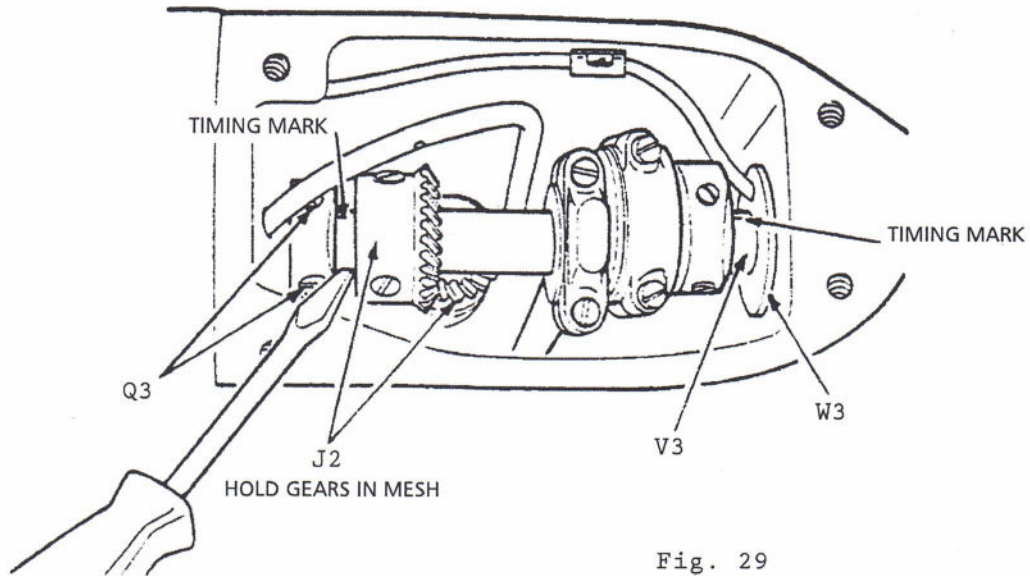


Fig. 29

CAUTION: The feed-timing-bevel-gears at J2, Fig. 29 have been lapped together at the factory and should be kept in mesh (as instructed in Fig. 29) throughout the removal and replacement of the arm shaft.

11. While maintaining needle bar crank T3 at position shown in Fig. 39, hold these gears in mesh by holding the blade of a large screwdriver between thrust collar and bevel gear as shown in Fig. 29; then push the end of the arm shaft V3, Fig. 29 through the bushing W3, Fig. 29.

12. Using another shaft (or a drift pin of the same diameter as the arm shaft on these machines), push the arm shaft V3 further through the machine (still keeping the gears at J2 in mesh). This temporary shaft must be pushed sufficiently far into the machine to hold the entire gear and feed eccentric mechanism in position upon it until the new arm shaft is installed. When inserting the temporary shaft (or a drift pin), make certain that every care is taken to avoid injury to the oil seal and ring in the arm shaft bushing (back) and consequent oil leakage.

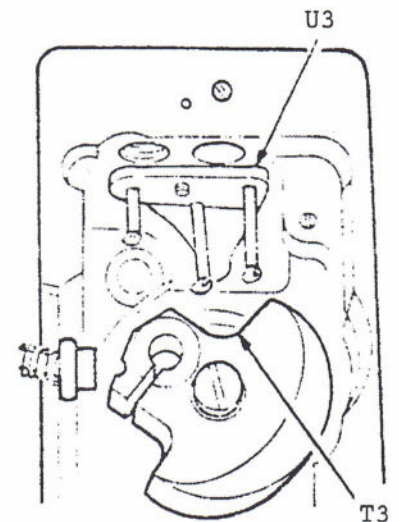


Fig. 30

13. Finally grasp the needle-bar-crank-end of the arm shaft firmly at the face plate end and pull the arm shaft straight out of the machine.

REPLACEMENT (See Fig. 31)

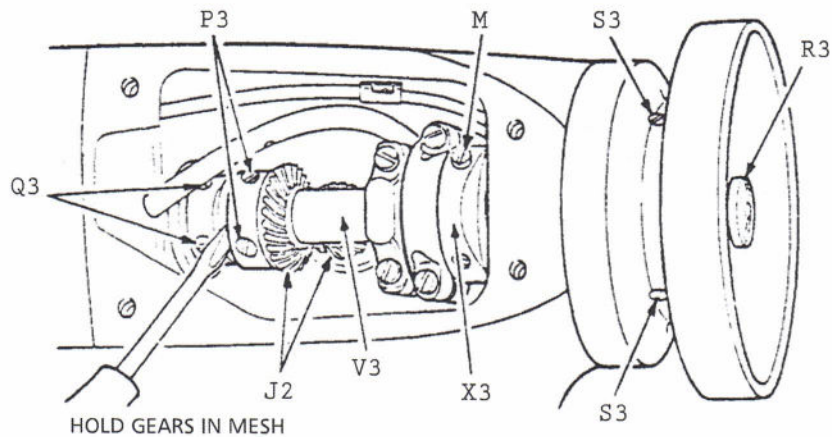


Fig. 31

1. Insert the machine-pulley-end of the arm shaft into the arm shaft bushing at the head of the machine arm.
2. Make certain that the needle bar crank is turned to the position shown in Fig. 30, clearing the three wick loops in holder U3.
3. While still holding the bevel gears at J2 in mesh, with a screwdriver, as shown in Fig. 31, push the arm shaft V3 straight through the machine arm, thrust collar, bevel gear, and feed and feed lifting eccentric X3. When installing the new arm shaft, make certain that every care is taken to avoid injury to the ring and the oil seal in the arm shaft bushing (back).
4. Replace machine pulley on the arm shaft, pushing it on until it contacts the oil seal and with the two set screws S3 located over the two grooves on the shaft. Then pull out machine pulley approximately 1 mm and securely tighten set screws S3. (When machine pulley is correctly set in position, the end of the arm shaft should be located approximately 1 mm inside the outer surface of the hub of the machine pulley.)
5. Replace and tighten the arm shaft screw R3. Test the arm shaft for freedom in rotation.
6. Move feed and feed lifting eccentric X3 toward machine pulley and securely tighten feed timing screw M.
7. Place the first finger of one hand on one side of the arm shaft and the first finger of the other hand on the other side of the arm shaft so that both fingers contact the bevel gear (on vertical shaft) that mates with the gear J2, Fig. 31. Feel for slight backlash. If there is no backlash, loosen two set screws P3. Lightly tap bevel gear away from mating gear until there is just a slight amount of backlash. Then securely tighten set screws P3 in bevel gear. Re-check the backlash.
8. Turn machine pulley over toward operator until the two set screws Q3 in the thrust collar which also serve as a balance weight are at the top. Align and securely tighten the upper set screw Q3 (set screw which appears immediately after the first set screw when machine pulley is rotated over toward operator) on the timing mark provided for it on the arm shaft. Then securely tighten the other set screw Q3.

9. Check the adjustment and timing of parts disturbed and correct where necessary, according to the instructions on pages 2 through 7.
10. Replace thread take-up, as instructed on pages 15 and 16.
11. Replace presser bar and presser foot, as instructed on page 14.
12. Replace the upper needle bar bushing and the needle bar, as instructed on page 13.
13. Replace thread take-up oil guard P2, Fig. 23, page 16.
14. Replace arm side shield and wick, as instructed, on page 16.
15. Replace arm top cover and tighten its four screws.
16. Replace face plate and tighten its three screws, as instructed on page 2.

Copyright © 1973 THE SINGER COMPANY
All Rights Reserved Throughout the World

NUMERICAL LIST OF PARTS FOR MACHINE 491D200GA

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
229 (805)	Rotating Hook Oil Flow Regulating Thumb Screw	504134 (850)	Feed Reverse Lever Hinge Stud Collar Set Screw
691-845	Spring Screw	504134 (850)	Rotating Hook Shaft Oil Retaining Collar Set Screw (2)
2102	Throat Plate Screw (2)	504145 (809)	Oil Removing Tube Retaining Clamp Screw
11170	Tension Disc (2)	505001	Arm Dowel Pin (2)
12431-452	Presser Bar Spring Washer	505008	Arm Spool Pin Washer (felt)
16380	Bed Slide	505151	Tension Releasing Lever Hinge Pin
32758	Oil Removing Lint Screen	505152	Tension Releasing Lever Spring
52033-452	Thread Take-up Spring	505317-452	Bed Slide complete, Nos. 12431-452, 154884 and two 154789
52130	Throat Plate (small needle hole) for 149031	505351	Rotating Hook Bobbin Case Hinge, Nos. 505353, 505354 and 505355
52239	Thread Take-up Lever Thread Eyelet Bushing	505353	Rotating Hook Bobbin Case Latch
52454	Arm Spool Pin and Thread Eyelet	505354	Rotating Hook Bobbin Case Latch Lever
55623	Thread Retainer	505355	Rotating Hook Bobbin Case Latch Lever Fulcrum Pin
99691	Rotating Hook Bobbin	505356	Rotating Hook Bobbin Case Latch Spring
143042	Tension Regulating Thumb Nut Washer	505575	Presser Bar Spring
143042	Rotating Hook Shaft Oil Filter Wick (felt)	505643	Presser Foot (spring hinged) complete
143058	Needle Bar Connecting Stud Slide Block	505647	Rotating Hook Shaft Oil Filter Wick Holder
143236	Feed Lifting Rock Shaft Oil Plug Screw Washer	505648	Rotating Hook Shaft Oil Filter complete, Nos. 143042 and 505647
143236	Feed Rock Shaft Oil Plug Screw Washer	505649	Presser Bar Bushing (lower)
146610	Presser Bar Lifting Lever Spring	540406	Arm Shaft (horizontal) Flanged Bushing (front)
149031	Feed Dog 19 teeth (22 teeth per inch)	540434	Needle Bar Connecting Stud with 545340
149111	Face Plate Plug	540450	Needle Bar Connecting Stud 540434 with 143058
154781 (850)	Arm Shaft (horizontal) Thrust Collar Set Screw (2)	540476	Thread Take-up Crank Wearing Plate
154781 (850)	Presser Bar Lifting Lever Pin Set Screw	540524	Needle Bar Bushing (lower)
154781 (850)	Thread Take-up Spring Regulator Set Screw	540528	Needle Bar Bushing (lower) Felt
154789 (819)	Bed Slide Spring Screw (2)	540533	Thread Take-up Spring Regulator O-ring
154884	Bed Slide Spring	540534	Thread Take-up Spring Regulator Rubber Cap
154983 (819)	Presser Bar Lifting Lever Connecting Rod Nut (2)	540536	Feed Bar Carrier
272111	Feed Bar Connecting Link Oil Wick Clamp	540537	Feed Bar Carrier 540536 with three 504013
504002 (850)	Arm Shaft (horizontal) Bushing (center) Set Screw	540538	Feed Bar Carrier Oil Wick (felt)
504002 (850)	Arm Shaft (horizontal) Flanged Bushing (back) Set Screw	540539	Feed Lifting Rock Shaft
504002 (850)	Arm Shaft (horizontal) Flanged Bushing (front) Set Screw	540540	Feed Lifting Rock Shaft complete, Nos. 143236, 504111, 540539 and 545810
504002 (850)	Rotating Hook Shaft Bushing (back) Set Screw	540541	Feed Lifting Rock Shaft Oil Wick (outer) (cotton)
504002 (850)	Rotating Hook Shaft Bushing (front) Set Screw	540541	Feed Rock Shaft Oil Wick (outer)(cotton)
504002 (850)	Thread Take-up Lever Link Hinge Stud Set Screw	540542	Feed Rock Shaft
504007 (850)	Feed Lifting Rock Shaft Collar Set Screw (4)	540543	Feed Rock Shaft complete, Nos. 143236, 540542, 545160 and 545839
504007 (850)	Feed Rock Shaft Collar Set Screw (2)	540544	Feed Bar complete, Nos. 540537, 540538, 545789, 545791, 545808, 545987 and two 504103
504010-451	Arm Side Shield Screw	540547	Feed Bar Connecting Link Oil Wick (cotton)
504010-451	Oil Removing Pump Piston Spring Bracket Set Screw	540549	Thread Guard (side of arm)
504010-451	Slack Thread Regulator Screw	540551	Arm Shaft (upright)
504010-451	Thread Take-up Lever Guard Screw	540553	Oil Removing Pump (body)
504010-451	Thread Take-up Lever Oil Guard Screw	540555	Oil Removing Pump Bracket
504013 (850)	Feed Bar Carrier Clamping Screw (2)	540556	Oil Removing Pump Piston
504013 (850)	Feed Bar Hinge Pin Clamping Screw	540557	Oil Removing Pump Piston Spring Bracket
504025 (850)	Bell Crank Bracket Set Screw (2)	540561	Oil Removing Tube
504028 (850)	Feed Rock Shaft Flanged Bushing (front) Set Screw	540606	Arm Shaft (horizontal) and Needle Bar Crank with 504095, 504117, 504120 and 549230
504029 (833)	Feed Rock Shaft Driving Frame Hinge Pin Set Screw	540608	Arm Shaft (horizontal) Thrust Collar with two 154781
504032 (805)	Rotating Hook Bobbin Case Latch Stop Screw	540610	Arm Side Shield with 545770 and 545771
504047 (833)	Tension Stud Set Screw	540612	Arm Top Cover with 540665 and 545773
504051 (850)	Feed Dog Screw (2)	540617	Bell Crank complete
504051 (850)	Feed Regulating Dial Stopper Screw	540619	Face Plate with 149111 and 546925
504063 (809)	Presser Foot Screw	540621	Feed and Feed Lifting Eccentric with two 54531
505064 (805)	Arm Screw (intermediate)	540623	Feed Regulating Dial with 545492, 540689 and 504134
504066 (833)	Arm Shaft (horizontal) Bevel Gear Set Screw (2)	540624	Feed Regulating Dial Lock Pin
504071 (810)	Oil Pump (centrifugal) (body) Screw (3)	540625	Feed Regulating Dial Lock Pin Spring
504084 (810)	Rotating Hook Bobbin Case Holder Position Bracket Screw	540626	Oil Removing Pump Piston Spring
504086 (806)	Rotating Hook Bobbin Case Tension Regulating Screw	540628	Feed Regulating Plate
504087 (806)	Rotating Hook Bobbin Case Tension Spring Screw	540629	Feed Reverse Lever with 545046
504094 (833)	Thread Retainer Set Screw	540630	Feed Reverse Lever complete, Nos. 504051, 540623, 540624, 540625, 540628, 540690, 549382 and 549383
504095 (850)	Thread Take-up Crank Set Screw	540631	Feed Reverse Lever Hinge Stud
504099 (809)	Arm Top Cover Screw (4)	540633	Feed Reverse Lever Hinge Stud 540630 with 545047 and 545825
504101 (850)	Arm Shaft (upright) Bevel Gear (lower) Set Screw (2)	540635	Feed Reverse Lever Hinge Stud Collar with 5041
504101 (850)	Rotating Hook Shaft Bevel Gear Set Screw (2)	540636	Feed Reverse Lever Hinge Stud Crank with 5491
504101 (850)	Arm Shaft (upright) Bevel Gear (upper) Set Screw (2)	540637	Feed Reverse Lever Hinge Stud Crank Connecting Link
504103 (803)	Feed Bar Connecting Link Cap Screw (2)	540639	Feed Reverse Lever Hinge Stud Flanged Bushing
504111 (809)	Feed Lifting Rock Shaft Oil Plug Screw	540641	Feed Reverse Lever Spring
504112 (850)	Needle Set Screw	540642	Feed Reverse Lever Spring Retainer
504117 (850)	Thread Take-up Crank Clamping Screw	540644	Feed Reverse Lever Spring Screw Collar
504118 (803)	Needle Bar Connecting Link Cap Screw		Feed Rock Shaft Crank with 549183 and 545181
504119 (850)	Machine Pulley Set Screw (2)		
504120 (850)	Needle Bar Crank Position Screw		
504129 (850)	Needle Bar Bushing (lower) Set Screw		
504129 (850)	Needle Bar Bushing (upper) Set Screw		
504129 (850)	Presser Bar Bushing (lower) Set Screw		
504134 (850)	Feed Regulating Dial Set Screw		

NUMERICAL LIST OF PARTS FOR MACHINE 491D200GA


<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
540645	Feed Rock Shaft Driving Frame complete, Nos. 540635, 540636, 540639, 540642, 540644, 540648, 540649, 540650, 540652, 548091, 549384, two each 540655, 540656, 540657 and 549288	545043 (819)	Feed Lifting Rock Shaft Crank (front) Clamping Screw
540648	Feed Rock Shaft Crank Connecting Rod with 545181 and two 545059	545046 (819)	Feed Reverse Lever Clamping Screw
540649	Feed Rock Shaft Crank Connecting Rod Pin	545047 (850)	Feed Reverse Lever Hinge Stud Cap Screw
540650	Feed Rock Shaft Crank Pin	545049 (805)	Oil Pump (centrifugal) Impeller Locking Screw
540652	Feed Rock Shaft Driving Frame with 545264 and two 545072	545050 (805)	Oil Pump (centrifugal) Screen Frame Screw (3)
540653	Feed Rock Shaft Driving Frame Hinge Pin (back)	545051 (850)	Oil Wick Holder Screw
540654	Feed Rock Shaft Driving Frame Hinge Pin (front)	545053 (850)	Presser Bar Lifter Hinge Screw
540655	Feed Rock Shaft Driving Link (large) (2)	545054 (850)	Presser Bar Lifting Lever Hinge Screw
540656	Feed Rock Shaft Driving Link (small) (2)	545057 (819)	Tension Releasing Lever Screw
540657	Feed Rock Shaft Driving Link (small) Pin (2)	545059 (810)	Feed Lifting Rock Shaft Crank (back) Connecting Rod Cap Screw (2)
540660	Needle Bar Connecting Link	545059 (810)	Feed Rock Shaft Crank Connecting Rod Cap Screw (2)
540661	Needle Bar Connecting Link 540660 with 540450	545072 (833)	Feed Rock Shaft Driving Link (small) Pin Set Screw (2)
540662	Needle Bar Connecting Link Roller Bearing	545099 (803)	Presser Bar Guide Bracket Clamping and Tension Releaser Screw
540662	Thread Take-up Lever Roller Bearing	545160 (809)	Feed Rock Shaft Oil Plug Screw
540663	Needle Bar Thread Guard	545181 (803)	Feed Rock Shaft Crank Connecting Rod Pin Set Screw
540665	Oil Flow Window	545181 (803)	Feed Rock Shaft Crank Pin Set Screw
540666	Oil Pipe	545239	Oil Removing Pump Bracket Set Screw (3)
540667	Oil Pipe complete, Nos. 540666, 545846 and 545847	545244 (805)	Feed Reverse Lever Spring Retainer Screw
540669	Presser Bar Lifting Lever with 154781	545264 (804)	Feed Rock Shaft Driving Frame Spring Stud
540670	Presser Bar Lifting Lever Link	545295 (805)	Feed Regulating Plate Screw (2)
540671	Tension complete, Nos. 32758, 99691, 540672, 540682, 540683, 540684, 546928 and two 2102	545313 (803)	Feed and Feed Lifting Eccentric Set Screw (2)
540672	Tension Releasing Disc	545340 (806)	Needle Bar Connecting Stud Clamping Screw
540673	Tension Releasing Lever (body) 545894 with 545057 and 540674	545403 (819)	Presser Bar Guide and Pressure Regulating Thumb Screw Lock Nut
540674	Tension Releasing Lever Segment	545404-451	Tension Regulating Thumb Nut Lock Nut (Spec. No. 1019)
540676	Thread Take-up Lever with 52130	545492	Feed Regulating Nut (Spec. No. 1050)
540677	Thread Take-up Crank	545493	Tension Regulating Thumb Nut (Spec. No. 1019)
540678	Thread Take-up Crank 540677 with 504118, 540661 and 540662	545753	Arm Screw (front) Washer (2)
540681	Rotating hook Shaft Bushing (back)	545754	Arm Shaft (upright) Bevel Gear (upper) Set Screw Hole Plug Screw Gasket (2)
540682	Tension Spring	545755	Thread Take-up Crank Clamping Screw Hole Plug Screw Gasket
540683	Tension Stud 545898 with 545493 and 545404-451	545757	Arm Shaft (horizontal) Bevel Gear with two 504066
540684	Tension Releasing Pin	545758	Arm Shaft (horizontal) Bushing (center)
540689	Feed Regulating Dial Pin	545761	Arm Shaft (horizontal) Flanged Bushing (front) Oil Tube
540690	Feed Regulating Dial Stopper	545764	Arm Shaft (upright) Bevel Gear (lower) Right Hand Spiral with two 504101
540695	Machine Pulley with two 504119	545765	Arm Shaft (upright) Bevel Gear (upper) Left Hand Spiral with two 504101
540702	Needle Bar (hollow) with 504112	545766	Arm Shaft (upright) Bushing (lower)
540703	Needle Bar Bushing (upper) Felt	545767	Arm Shaft (upright) Bushing (upper)
540706	Arm Shaft (horizontal) Flanged Bushing (back)	545770	Arm Side Shield Wick Spring Holder
540707	Arm Shaft (horizontal) Flanged Bushing (back) Oil Seal	545771	Arm Side Shield Wick
540708	Arm Shaft (horizontal) Flanged Bushing (back) Ring	545773	Arm Top Cover Gasket
540714	Oil Removing Tube Retaining Spring	545775	Bed Hole Plug
540716	Rotating Hook Shaft Bushing (front)	545776	Bed Leg (long)
540718	Machine Pulley Cap	545777	Bed Leg (short) (3)
540719	Oil Pipe Clamping Sleeve Nut	545788	Feed Bar Connecting Link
540720	Arm Shaft (horizontal) Flanged Bushing (front) 540406 with Oil Drain Tube and 540722	545789	Feed Bar Connecting Link 545788 with 272111 and 540547
540722	Arm Shaft (horizontal) Flanged Bushing (front) Oil Drain Tube Tape	545791	Feed Bar Hinge Pin
540771	Needle Bar Bushing (lower) Thread Eyelet	545799	Feed Lifting Rock Shaft Crank (back) Connecting Rod Hinge Stud
540767	Rotating Hook Bobbin Case Tension Spring	545806	Feed Lifting Rock Shaft Collar with two 504007 (2)
540769	Rotating Hook Bobbin Case with 540767, 504086 and 504087	545807	Feed Lifting Rock Shaft Crank (back) with two 549183
540770	Rotating Hook Bobbin Case complete, Nos. 504032, 505351, 505356 and 540769	545808	Feed Lifting Rock Shaft Crank (front) with 545043
543363	Oil Wick Holder	545810	Feed Lifting Rock Shaft Oil Wick (cotton)
543365	Oil Wick Holder complete, Nos. 545051, 545363 and two 545909	545812	Feed Lifting Rock Shaft Crank (back) Connecting Rod with two 545059
543367	Thread Take-up Lever Link	545825	Feed Reverse Lever Hinge Stud O-ring
543368	Thread Take-up Lever Link Hinge Stud	545836	Feed Rock Shaft Flanged Bushing (front)
543369	Thread Take-up Lever Link Hinge Stud 543368 with 543370	545837	Feed Rock Shaft Collar with two 504007
543370	Thread Take-up Lever Link Hinge Stud Oil Wick (cotton)	545839	Feed Rock Shaft Oil Wick (cotton)
543371	Oil Removing Tube Retaining Clamp	545841	Needle Bar Bushing (upper)
543416	Thread Take-up Complete, Nos. 540662, 540676, 540678, 543367 and 543369	545845	Oil Pipe
544066	Face Plate Screw (lower) (2) (Spec. No. 1009)	545846	Oil Pipe Clamping Sleeve
545033 (805)	Arm Screw (back) (2)	545847 (805)	Oil Pipe Clamping Sleeve Nut
545034 (805)	Arm Screw (front) (2)	545849	Oil Pipe Clamping Sleeve
545036 (819)	Arm Shaft (upright) Bevel Gear (upper) Set Screw Hole Plug Screw (2)	545852	Oil Pipe 545845 with 545849 and 540719 for Oiling Rotating Hook Shaft Bearing (front) 540716
545037 (819)	Thread Take-up Crank Clamping Screw Hole Plug Screw	545854	Oil Pump (centrifugal)
545038 (819)	Arm Shaft (horizontal) Flanged Bushing (front) Oil Tube Cap Screw	545855	Oil Pump (centrifugal) Cover
545040 (809)	Face Plate Screw (short)	545856	Oil Pump (centrifugal) Impeller
		545857	Oil Pump (centrifugal) Screen

NUMERICAL LIST OF PARTS FOR MACHINE 491D200GA

<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
545858	Oil Pump (centrifugal) Screen Frame	540525	Needle Bar Bushing (lower), in place of 540524
545862	Pair of Gears Nos. 545764 and 545887	540546	Needle Bar Bushing (lower) 540525 with 545935, in place of 546933
545863	Pair of Gears Nos. 545757 and 545765	540685	Thread Take-up Crank, in place of 540677
545864	Presser Bar (hollow)	540688	Thread Take-up Crank 540685 with 504118, 54066 and 540662, in place of 540678
545868	Presser Bar Lifter	540696	Tension complete, Nos. 32758, 99691, 125314, 540672, 540683, 540684, 546928 and two 2102, in place of 540671
545871	Presser Bar Lifting Lever Connecting Rod	540698	Needle Bar (hollow) with 504112, in place of 540702
545872	Presser Bar Lifting Lever Connecting Rod Oil Mist Retaining Disc (felt)	543364	Oil Wick Holder, in place of 543363
545873	Presser Bar Lifting Lever Connecting Rod Swivel	543366	Oil Wick Holder complete, Nos. 543364, 545051 and two 545909 in place of 543365
545875	Presser Bar Lifting Lever Pin	543717	Thread Take-up complete, Nos. 540662, 540676, 540688, 543367 and 543369, in place of 54067
545876	Presser Bar Guide and Pressure Regulating Thumb Screw 549363 with 545403	545935	Needle Bar Bushing (lower) Thread Eyelet, in place of 540771
545881	Rotating Hook Bobbin Case Holder Position Bracket	CAT.1901	Needle (135 x 7 #16)
545883	Rotating Hook Oil Flow Regulating Thumb Screw Spring		
545884	Rotating Hook Shaft		
545885	Rotating Hook Shaft 545884 with 505648		
545886	Rotating Hook Shaft 545885 with 545890		
545887	Rotating Hook Shaft Bevel Gear (left hand spiral) with two 504101		
545890	Rotating Hook Shaft Oil Retaining Collar with two 504134		
545892	Slack Thread Regulator	41400	<u>ACCESSORIES AND ATTACHMENTS</u>
545894	Tension Releasing Lever (body)	55623	Machine Rest Pin (wood)
545898	Tension Stud	505655-001	Rotating Hook Bobbin (3)
545901	Thread Eyelet (side of arm)	505656-001	Universal Bobbin Winder complete (include two wood screws) (purchased assembly)
545902	Thread Take-up Lever Guard	540520	Thread Unwinder (for two spools) complete (include three wood screws)(purchased assembly)
545908	Thread Take-up Lever Oil Guard with 545909	540521	Machine Base and Oil Reservoir Cushion (front) (with two wire nails) (2)
545909	Oil Wick (cotton) (2)	540522	Machine Base and Oil Reservoir Cushion (back) (with two wire nails) (2)
545909	Thread Take-up Lever Oil Guard Wick (cotton)	540523	Machine Hinge Connection (2)
545949	Feed Lifting Rock Shaft Flanged Bushing (2)	541513	Machine Hinge Connection Cushion (2)
545949	Feed Rock Shaft Flanged Bushing (back)	541514	Screw Driver (large)
545950	Rotating Hook (body) with two 549182	541515-001	Screw Driver (small)
545951	Rotating cock complete, Nos. 945950, 545954, 545955, three 549187 and four 549186	545927	Cloth Guide (purchased part)
545954	Rotating Hook Section	548701	Oil Can (950 cc, filled with Singer Type "C" Oil)
545955	Rotating Hook Thread Guard	549184-001	Screw Driver (long)
545983	Presser Bar Guide Bracket with 545099	CAT.1901	Cloth Guide Screw (purchased part)
545987	Feed Bar	CAT.1901	Needle (135 x 7 #14) (for 491D200AA) (3)
545990	Rotating Hook and Rotating Hook Bobbin Case Holder complete, Nos. 545951 and 545994	CAT.1901	Needle (135 x 7 #16) (for 491D300AA) (3)
545991	Rotating Hook, Rotating Hook Bobbin Case Holder and Rotating Hook Bobbin Case complete, Nos. 540770 and 545990		
545994	Rotating Hook Bobbin Case Holder		
546925	Face Plate Gasket		
546927	Thread Take-up Spring Regulator with 504047		
546928	Thread Take-up Spring Regulator 546927 with 540533 and 540534	540471	<u>MACHINE BASE AND OIL RESERVOIR</u>
546933	Needle Bar Bushing (lower) 540524 with 540771	540500	Machine Base and Oil Reservoir Plug (2)
548091	Feed Rock Shaft Driving Frame Spring	543360	Machine Base and Oil Reservoir Gasket (rubber)
548479	Oil Pump (centrifugal)(body) Position Pin (2)	545036 (819)	Machine Base and Oil Reservoir
548970	Presser Bar Lifting Lever Pin Spring	545064 (805)	Machine Base and Oil Reservoir Oil Drain Plug Screw
549128	Thread Eyelet (side of arm) Screw (Spec. No. 1003)	545754	Machine and Machine Base and Oil Reservoir Screw Hole Plug Screw
549182 (803)	Rotating Hook Screw (2)	545925	Machine Base and Oil Reservoir Oil Drain Plug Screw Gasket (4)
549183 (850)	Feed Lifting Rock Shaft Crank (back) Clamping Screw (2)		Machine and Machine Base and Oil Reservoir Screw with Washer (for shipping purposes only)
549183 (850)	Feed Reverse Lever Hinge Stud Crank Clamping Screw		
549183 (850)	Feed Rock Shaft Crank Clamping Screw		
549186 (806)	Rotating Hook Thread Guard Screw (4)	505402	<u>KNEE LIFTER PARTS</u>
549187 (803)	Rotating Hook Section Screw (3)	540686	Rock Shaft Knee Arm Plate
549230 (805)	Arm Shaft (horizontal) Screw Plug (2)	545912	Rock Shaft Spring (coil)
549288 (830)	Feed Reverse Lever Hinge Stud Crank Connecting Link Screw (2)	545913	Bell Crank Plunger
549336 (825)	Thread Guard (side of arm) Screw	545915	Rock Shaft
549363 (819)	Presser Bar Guide and Pressure Regulating Thumb Screw	545917	Rock Shaft Crank
549382	Feed Regulating Screw (Spec. No. 1050)	545918	Rock Shaft Knee Arm
549383	Feed Regulating Screw Guide Screw (Spec. No. 1050)	545921	Rock Shaft Knee Arm Hub
549384	Feed Reverse Lever Spring Screw (Spec. No. 1019)	545922	Rock Shaft Spring
549396	Rotating Hook Oil Flow Regulating Thumb Screw	545923	Rock Shaft Stop Dog
CAT. 1901	Needle (135 x 7 #14)	546736	Rock Shaft complete, Nos. 505402, 540686, 545913, 545915, 545917, 545918, 545921, 545922 and 546736
			Rock Shaft Spring (coil) Washer



PARTS FOR 491D300GA MACHINE WHICH DIFFER FROM 491D200GA MACHINE


125314	Tension Spring, in place of 540682	12481	<u>AVAILABLE AT EXTRA CHARGE</u>
142061-452	Throat Plate (large needle hole) for 149057, in place of 52033-452	12482-452	Feed Dog for 12482 (for heavy material sewing)
149057	Feed Dog, 21 teeth (22 teeth per inch), in place of 149031	52032-452	Throat Plate for 12481 (for heavy material sewing)
		142060-452	Throat Plate (large needle hole) for 149031
		545945	Throat Plate (small needle hole) for 149057
			Box Wrench

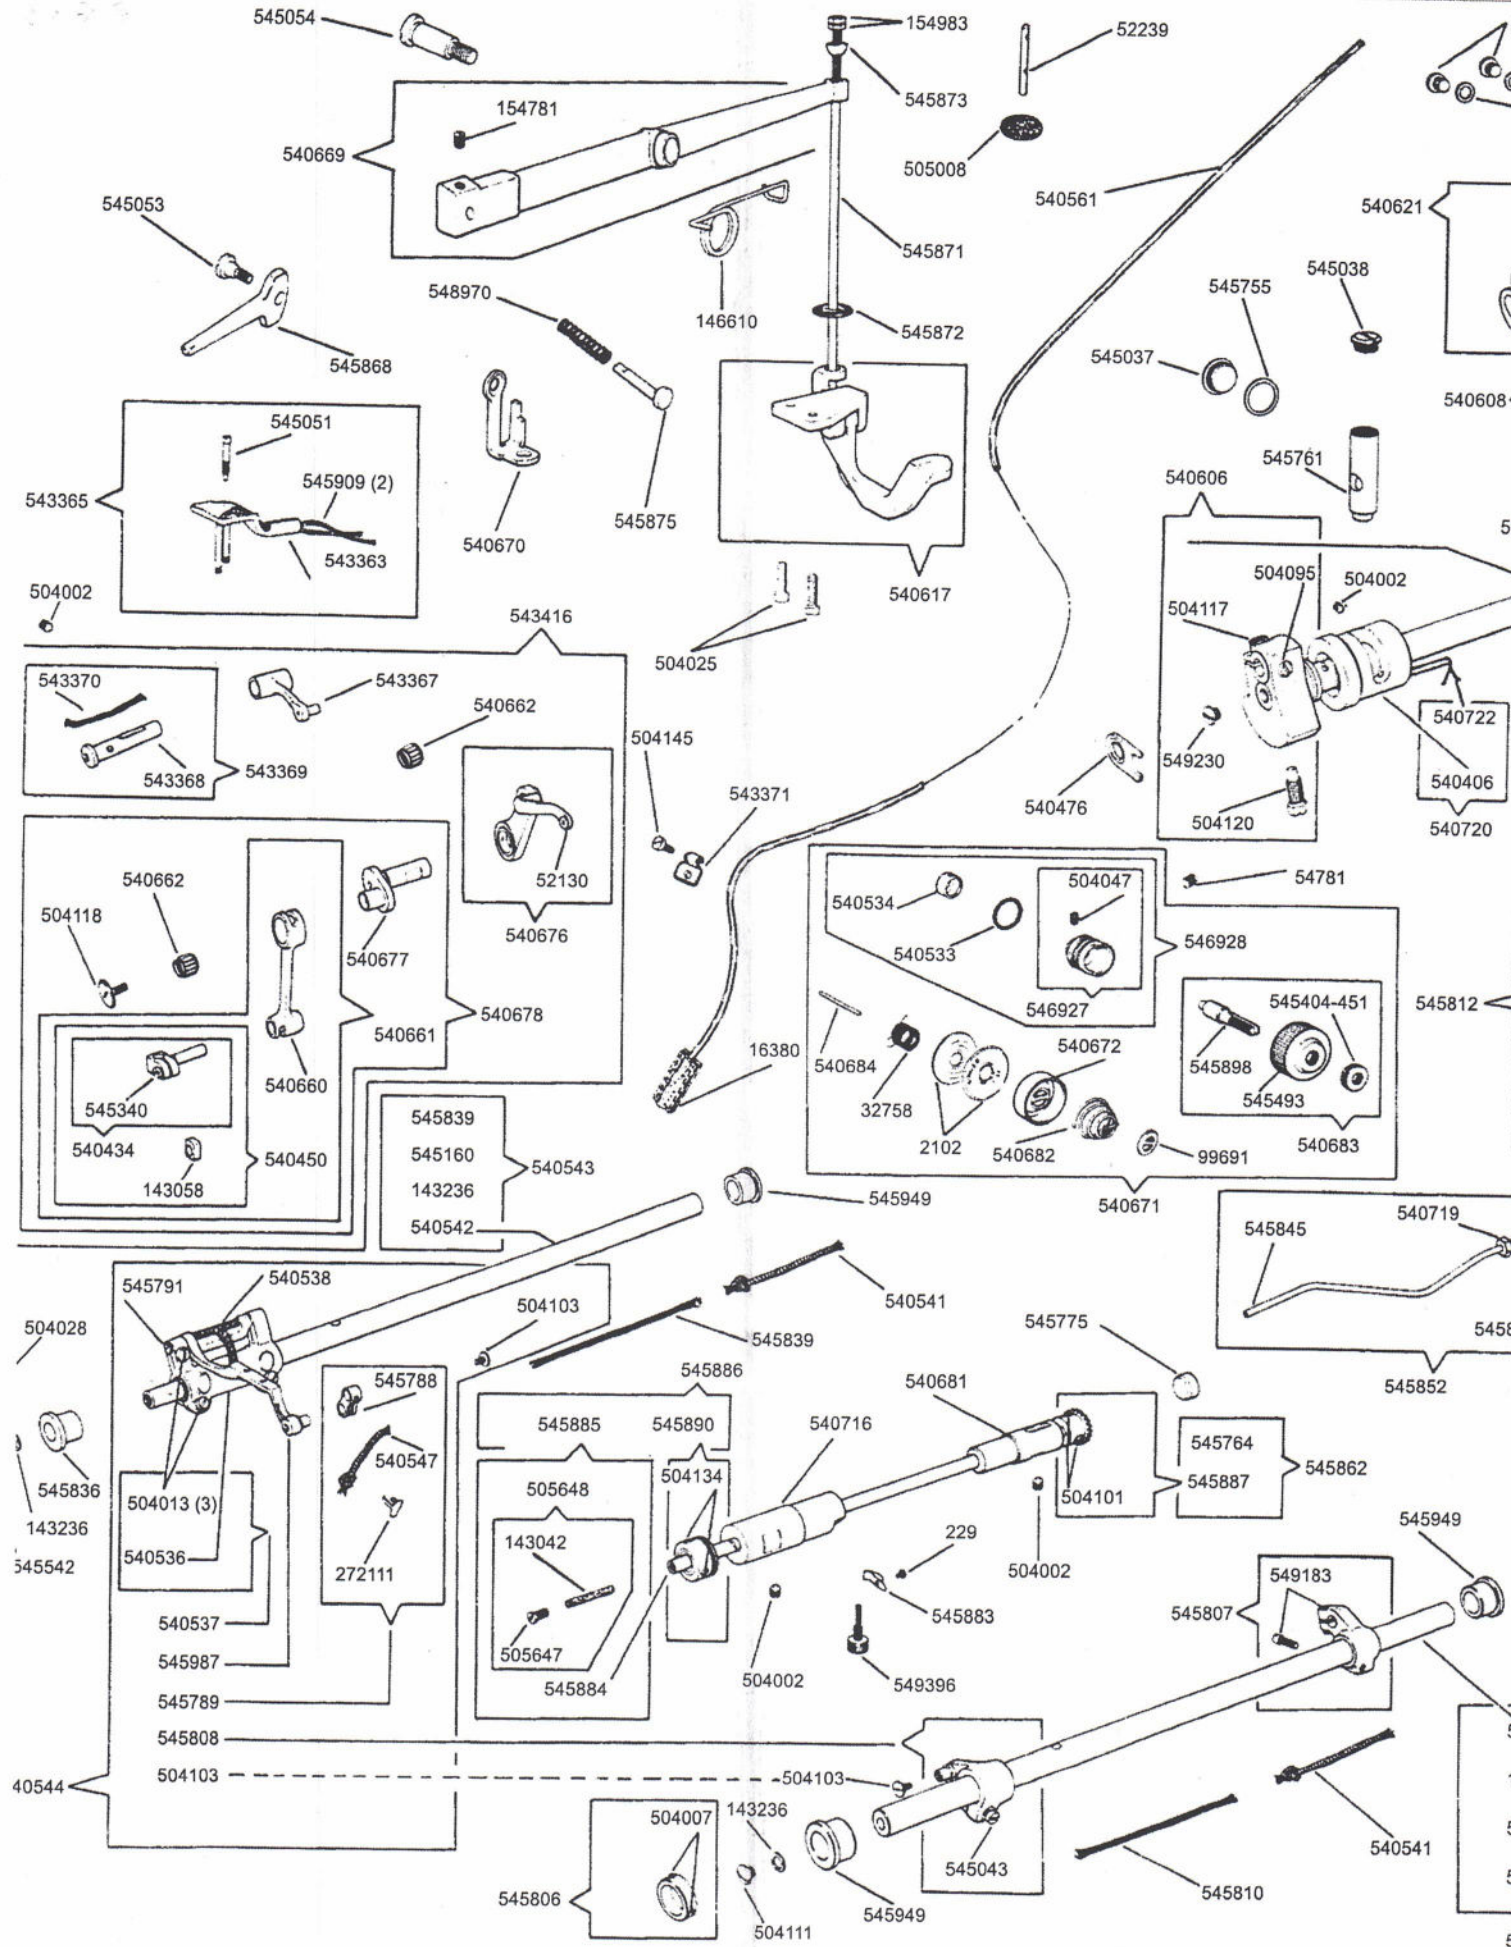

SINGER*

491D

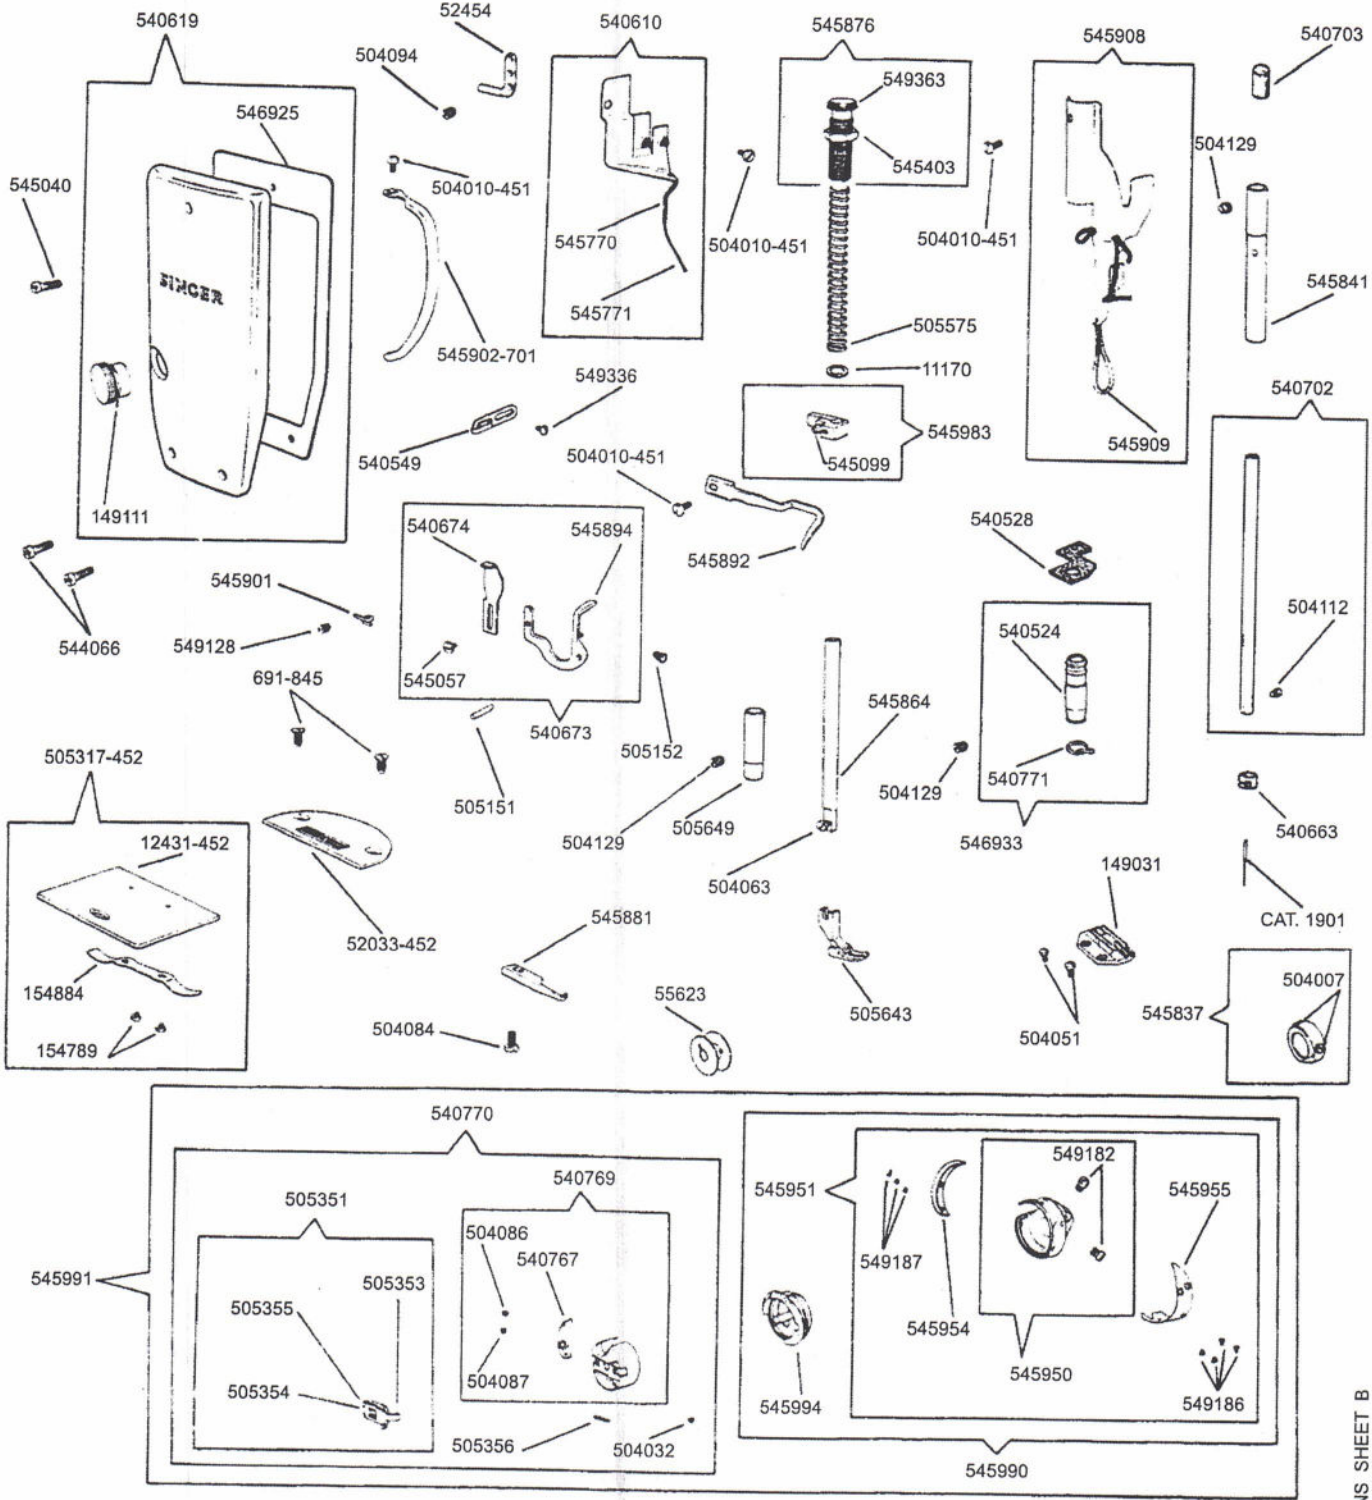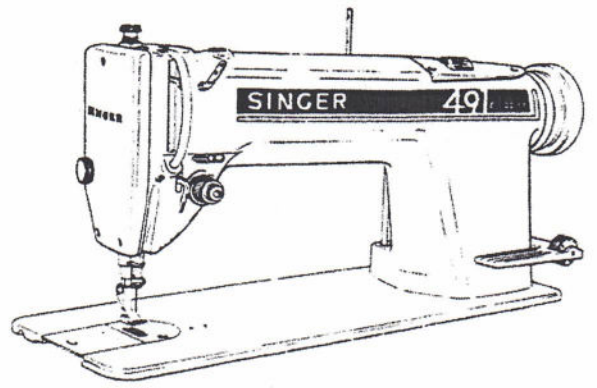





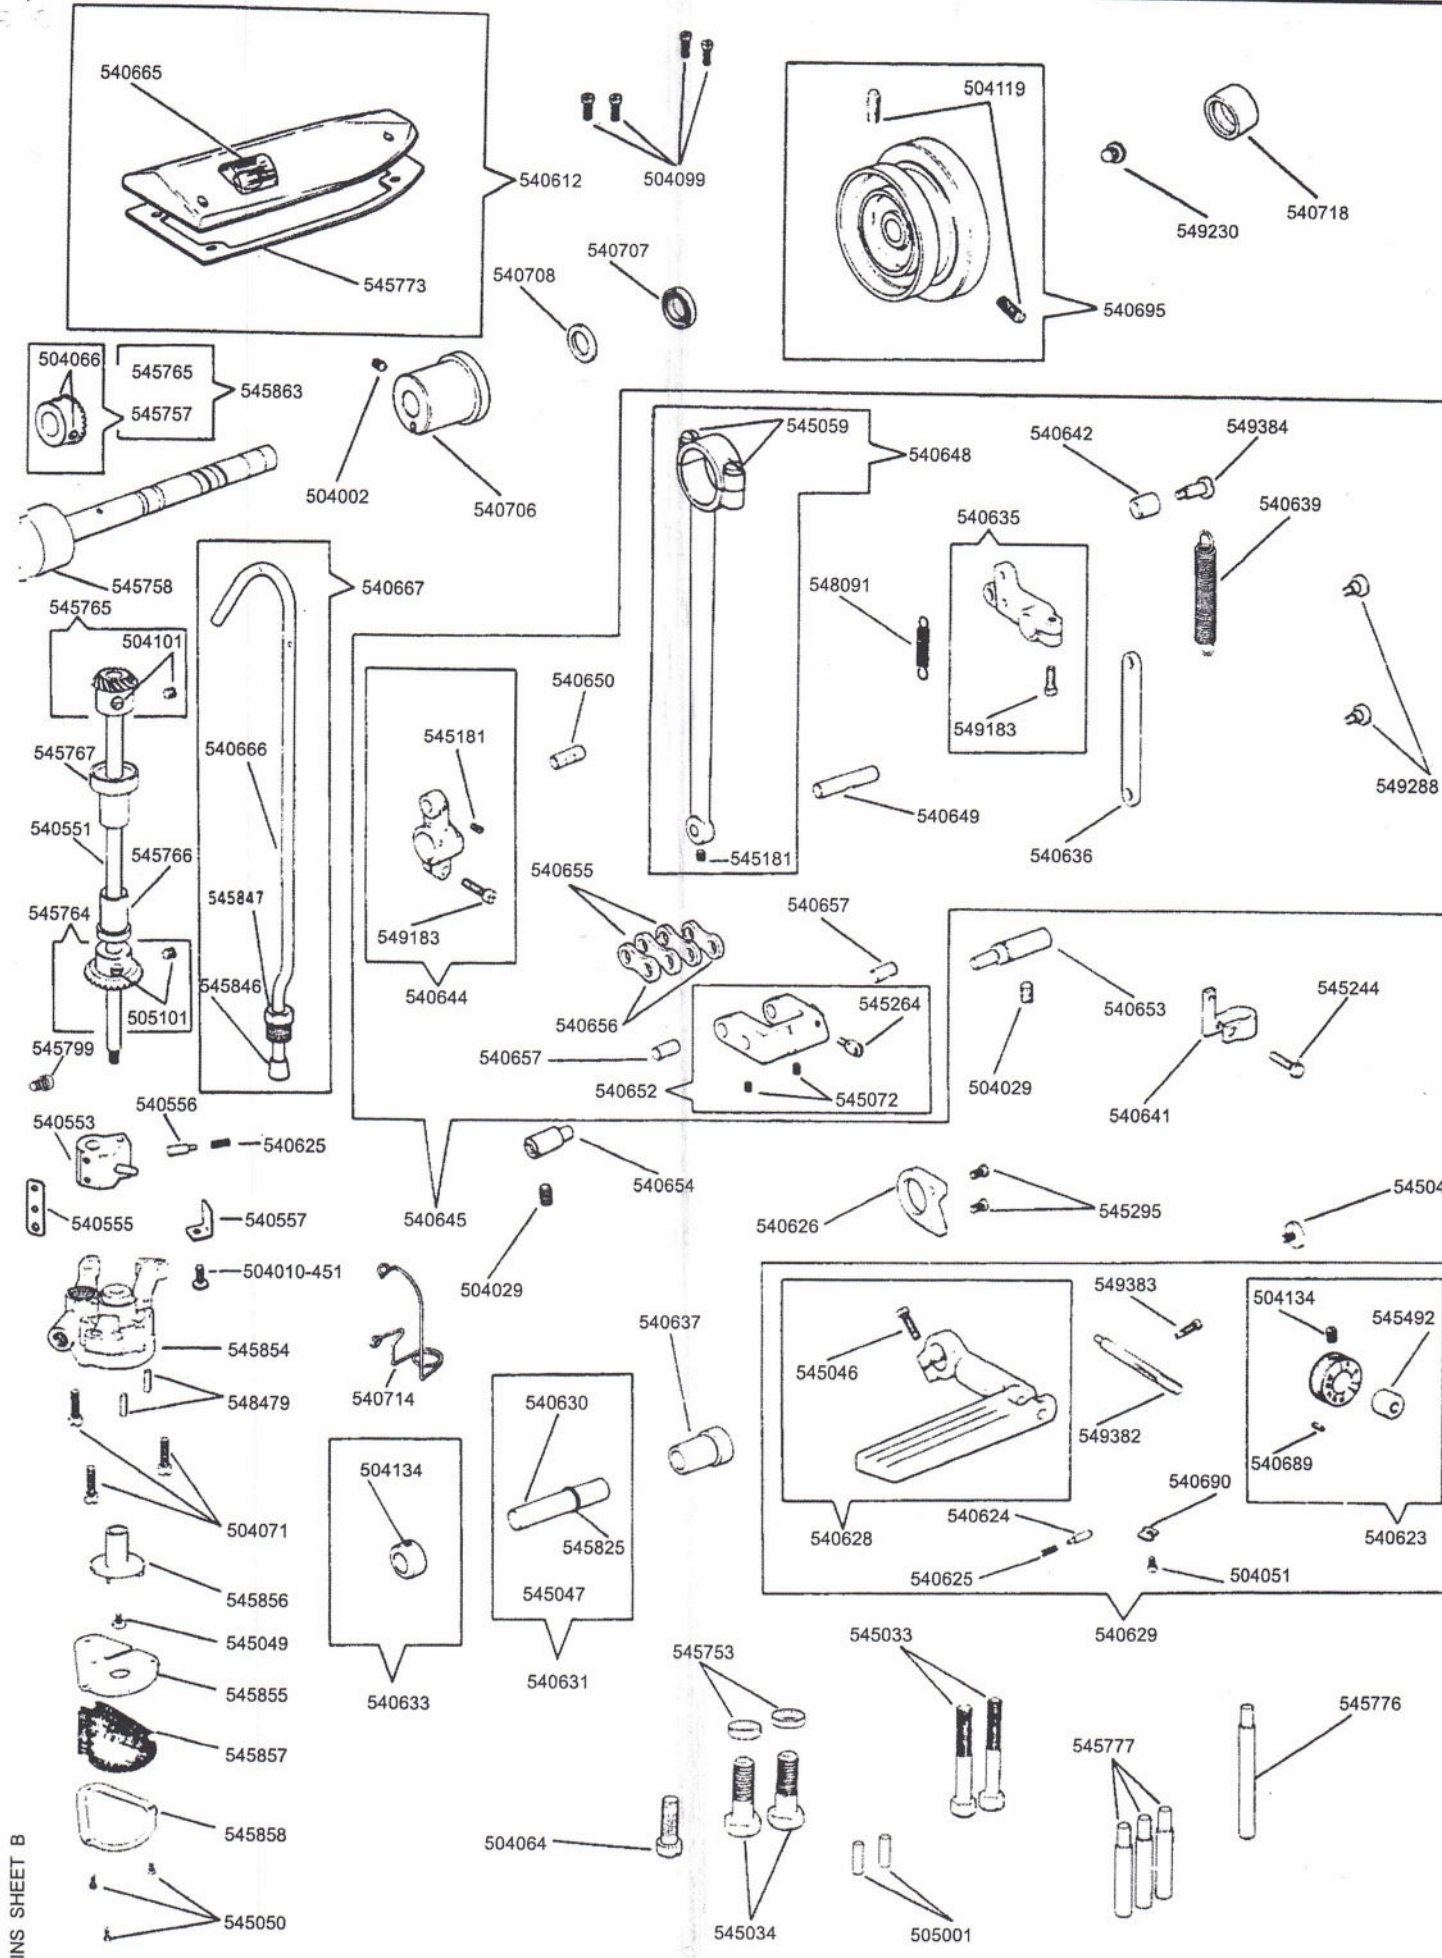


JOINS SHEET B


SHEET 'C'

SINGER 491D


PARTS FOR 491D300GA MACHINE WHICH DIFFER FROM 491D200GA MACHINE

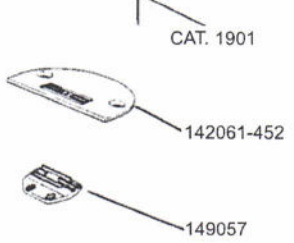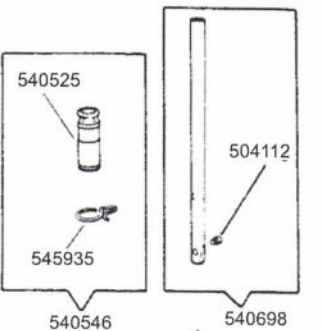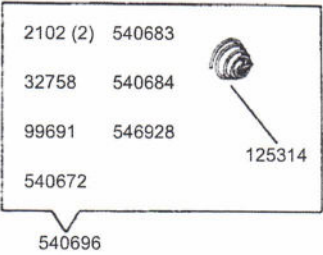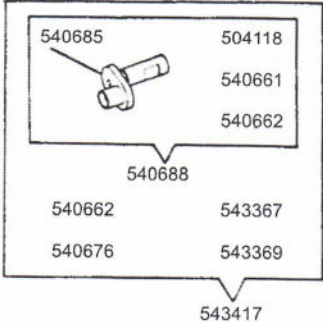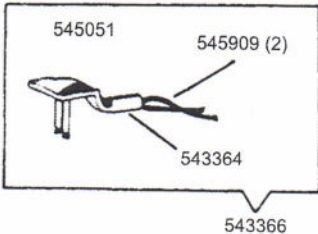


ACCESSORIES AND ATTACHMENTS

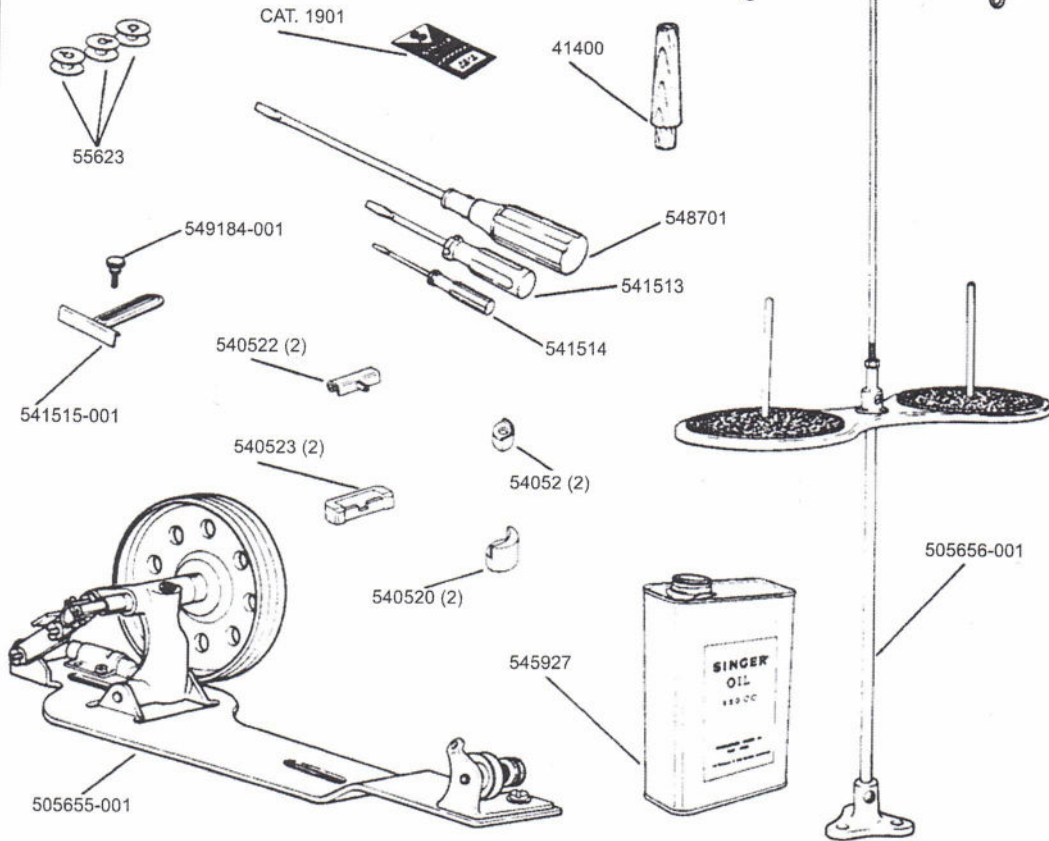

MACHINE BASE AND OIL RESERVOIR

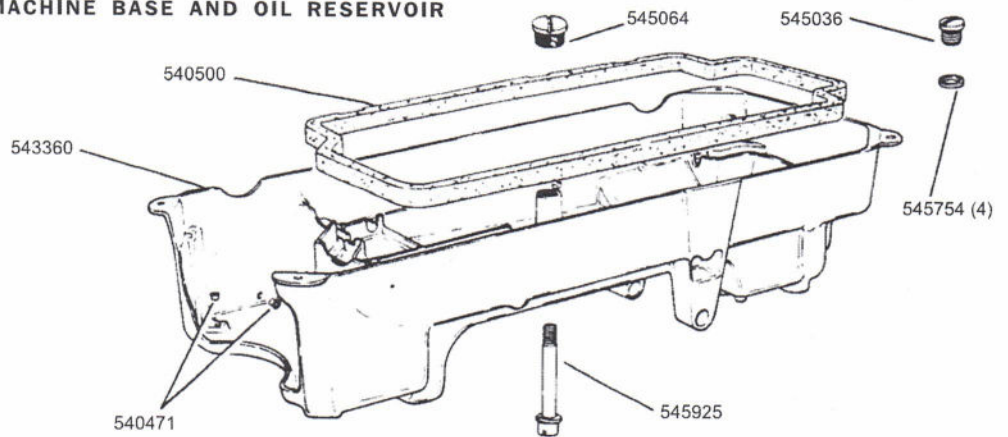

KNEE LIFTER PARTS

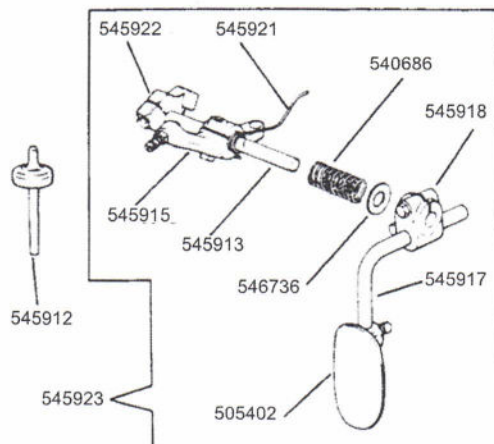

AVAILABLE AT EXTRA CHARGE

